



Desk Panels DPG and Desk Control™ App User manual

Contents

Preface	3
Important information	4
Safety instructions	4
Only for EU markets	7
Only for Non EU markets	7
Misuse	7
Informations importantes	8
Consignes de sécurité	8
Seulement pour les marchés au sein de l'UE	9
Seulement pour les marchés hors UE	9
Utilisation abusive	9
Repairs	10
Manufacturers declaration	10
Declaration of Conformity	11
Misc. on the DESKLINE® system	12
Warranty.....	12
Maintenance.....	12
Cleaning the desk panel.....	12
ETL-marking	13
Products	14
Installation	15
Operation	20
DPG1K	20
DPG1M	21
DPG1B	28
DPG1C	36
Troubleshooting/FAQs	45
Bluetooth® Adapter BLE2LIN002/BLE2LIN003	46
Installation	47
Desk Control™ App	48
Getting started	50
Operation	55
Disposal of LINAK products	65
Drawing appendix	66
Labels	70
Addresses	72

Preface

Dear User,

We are delighted that you have chosen a product from LINAK®.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls and chargers.

This User Manual does not address the end-user. It is intended as a source of information for the manufacturer of the equipment or system only, and it will tell you how to install, use and maintain your LINAK electronics. It is the responsibility of the manufacturer of the end-use product to provide a User Manual where relevant safety information from this manual is passed on to the end-user.

We are sure that your LINAK product will give you many years of problem-free operation.

Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your systems, you are always welcome to contact your local dealer.

LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a limited warranty on its products. This warranty is, however, subject to correct use in accordance with the specifications, maintenance being done correctly, and any repairs being carried out at a service centre, which is authorised to repair LINAK products. Changes in installation and use of LINAK products/systems can affect their operation and durability. The products are not to be opened by unauthorised personnel. You can review the full terms of the LINAK warranty on the LINAK website www.linak.com/warranty.

The User Manual has been written based on of our present technical knowledge. We are constantly working on updating the information and we therefore reserve the right to carry out technical modifications.

LINAK A/S

Important information

Important information on LINAK® products can be found under the following headings:



Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury.



Failing to follow these instructions can result in the product being damaged or being destroyed.

Safety instruction



General

Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.



It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to this User Manual. Follow the instructions for mounting – risk of injury if these instructions are not followed.



The appliance is not intended for use by young children or infirm persons without supervision.



If there is visible damage on the product it must not be installed.



Note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example the squeezing of fingers or arms.



Assure free space for movement of application in both directions to avoid blockade.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference received, including interference that may cause undesired operation**

- **Statement – for all intentional and unintentional radiators:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- **Statement for digital devices for Class B:**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.
-

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
 - (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
-

Labeling Requirements:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Only for EU markets



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Only for Non EU markets



Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical, sensory or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.



Moreover, children must be under surveillance to ensure that they do not play with the product.

Misuse



Do not overload the actuators – this can cause danger of personal injury and damage to the system.



Do not use the actuator system for lifting persons. Do not sit or stand on a table while operating – risk of personal injury.



Do not use the system in environments other than the intended indoor use.

Informations importantes

Les informations importantes sur les produits LINAK® peuvent être trouvées dans les rubriques suivantes:



Attention!

Le non respect de ces instructions peut entraîner des accidents impliquant des blessures graves.



Ne pas suivre ces instructions peut entraîner l'endommagement ou destruction du produit.

Consignes de sécurité



Général

Le non respect de ces instructions peut entraîner des accidents impliquant des blessures graves.

Ne pas suivre ces instructions peut entraîner l'endommagement ou destruction du produit.

L'utilisation en toute sécurité du système n'est possible que si l'intégralité des instructions ont été lues et ont été strictement suivies.



Le non respect de se conformer aux instructions marquées du symbole "note" peut entraîner de graves dommages au système ou à un de ses composants.

Il est important pour tout individu qui connecte, installe, ou utilise le système d'avoir les informations nécessaires et l'accès à ce manuel d'utilisation.

Suivez les instructions pour le montage – risque de blessure si ces instructions ne sont pas suivies.



L'appareil n'est pas destiné à être utilisé par des enfants ou des personnes handicapées sans surveillance.



S'il y a des dommages visibles sur le produit, l'installation ne doit pas être effectuée.



Prendre en compte lors de la construction du matériel, dans lequel l'actionneur est incorporé, qu'il ne doit y avoir aucune possibilité de blessures corporelles, telles que la compression des doigts ou des bras.



Assurez un espace libre autour du matériel pour éviter tout blocage.

Seulement pour les marchés au sein de l'UE:



Cet appareil peut-être utilisé par des enfants âgés de 8 ans et plus, ainsi que les personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou ayant un manque d'expérience et de connaissance si elles ont bénéficié d'une surveillance ou d'instructions concernant l'utilisation de l'appareil en toute sécurité et compris les risques encourus.



Les enfants ne doivent pas jouer avec l'appareil. Le nettoyage et l'entretien ne doivent pas être réalisés par des enfants sans surveillance.

Seulement pour les marchés hors UE:



Les personnes qui n'ont pas l'expérience ou les connaissances nécessaires sur le ou les produit(s) ne doivent pas le ou les utiliser. Par ailleurs, les personnes ayant des capacités physiques, sensorielles ou mentales réduites ne doivent pas utiliser le ou les produit(s), sauf si elles sont sous surveillance ou ont suivi une formation approfondie de l'utilisation de l'appareil par l'individu responsable de la sécurité de ces personnes.



De plus, les enfants doivent-être sous surveillance afin de s'assurer qu'ils ne jouent pas avec le produit.

Utilisation abusive:



Ne surchargez pas les actionneurs – cela peut engendrer un risque de blessures corporelles et endommager le système.



Ne pas utiliser les actionneurs pour soulever des personnes. Ne pas s'asseoir ou se tenir debout sur une table en fonctionnement – risque de blessures.



Ne pas utiliser le système dans des environnements autres que l'utilisation intérieure prévue.

Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK service centres or repairers, as special tools must be used and special gaskets must be fitted. Products under warranty must also be returned to authorised LINAK service centres.

Further information on DESKLINE warranty can be found on the LINAK website www.linak.com/warranty.



Warning!

If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.



Warning!

The DESKLINE® systems are not resistant to cutting oil.

Manufacturer's declaration

DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

Herewith declares that LINAK DESKLINE® products as characterized by the following models and types:

Control Boxes: CBD65a00b0A-c09 (Where -a: can be P, C or H, -b: can be 2, 3 or 4 and -c: can be 0 or 7)

Linear Actuators: LA31

Built in actuator(s): DB5, DB6, DB14,

Lifting Columns: DL1A, DL4S, DL2, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, DL18, DL19, DL20, DL21

Desk Panels: DPA, DPB, DPH, DPF1K, DPF1M, DPF2K, DPF3K, DPF1C, DPF1D, DPF1U, DPF1W, DPF4T, DPG1K, DPG1M, DPG1B, DPG1C, DPT, DP1V01, DP1CS, DP1K, DP1U, DP2K, DP3K, DPN, DPWA

Accessories: BLE2LIN002, BLE2LIN003, DESK SENSOR 1, USB2LIN, DCConnector

complies with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*:

- 1.1.2 a) Special use*
- 1.1.2 b) Selection of the most appropriate methods*
- 1.1.2 c) Foreseeable misuse*
- 1.1.2 d) Operator constraints due to the use of personal protective equipment*
- 1.1.3 Materials and products*
- 1.2.1 Safety and reliability of control systems
- 1.2.2 Control devices. Shape, readability, overview*
- 1.2.3 Starting*
- 1.2.4 Stopping*
- 1.5.1 Electricity supply
- 1.5.10 Radiation, EMC. Emission of electromagnetic radiation, X-rays, γ-rays*
- 1.5.11 External radiation*

*need to be further evaluated in the end product

We confirm that prior to market introduction the relevant technical documentation is compiled in accordance with part B of Annex VII and the assembly instruction pursuant to Annex VI.

This documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.
The products mentioned in this document are to be combined for use in height adjustable furniture.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.

Nordborg, 2020-10-28

LINAK A/S
Dragan Macura,
Regulatory Compliance Manager
Desklina and Homeline Segments
Authorized to compile the relevant technical documentation

Original Declaration

DECLARATION OF CONFORMITY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

hereby declares that LINAK Bluetooth handset
HC4aBLbcSddee00-f

(Where - a can be 2, 3 or 4; - b can be 0 or 1; - c can be 0 or 1; - dd can be 00 or 01; - ee can be 00, 01, 02, x-; - f can be any letter)

complies with the Radio Equipment Directive 2014/53/EU according to following standards:

EN 300328 V2.1.1:2016,
EN 301489-1 V2.2.0:2017, EN 301489-17 V3.2.0:2017
EN 62479:2010,
EN 62368-1:2014+A11:2017

complies with RoHS2 Directive 2011/65/EU according to following standards:

EN 50581:2012

Nordborg, 2019-09-26

LINAK A/S
John Kling, B.Sc.E.E.
Regulatory Affairs Manager
Authorized to compile the relevant technical documentation

Original Declaration

Use the BLE2LIN in an environment with temperature between -10 and +50 °C. Otherwise, the BLE2LIN may be damaged. It can be operated at altitudes up to 2000 m.

Hereby, LINAK A/S declares that the radio equipment type BLE2LIN is compliant with Directive 2014/53/EU.



The equipment is a Bluetooth® Adapter powered by 9 V DC or 18 V input charged by an RJ45 port.

Operating Frequency Range
Bluetooth® 2402 - 2480 MHz

The maximum RF Output Power
-9.81 dBm EIRP

Misc. on the DESKLINE® system

Warranty



This DESKLINE product is subject to warranty pursuant to the terms of LINAK DESKLINE Warranty Paper, available on the LINAK website www.linak.com/warranty.

Maintenance

Clean dust and dirt from the outside of the system at appropriate intervals and inspect for damage and breaks. Inspect connections, cables, and plugs without disconnecting, and check functioning as well as fixing points.

Cleaning the desk panel

Clean your desk panel with a soft damp cloth. Universal cleaning detergents may be used.

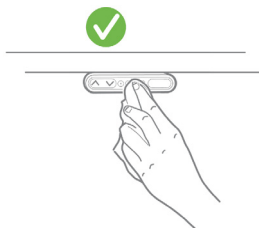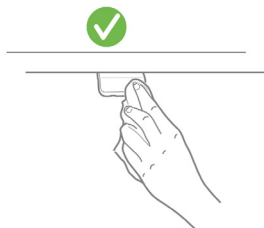

For disinfection of the desk panel, use a 70 percent isopropyl alcohol either as a wipe or add a small amount to a soft cloth.




The desk panel is not a sealed unit and there are electronics inside it.

If liquids or moisture enter an opening, the PCB may be damaged, and the desk panel ruined.

Thus:

- Avoid moisture penetrating any openings as this may damage the PCB inside the desk panel
- Avoid spraying the cleaning agent or disinfectant directly on the desk panel as moisture may penetrate openings damaging the PCB inside the desk panel

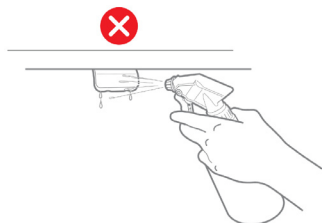

- Cleaning agents and disinfectants must not be highly alkaline or acidic (pH value must be 6 to 8), and they must not contain bleach or chlorine
- Do not use hand sanitizer gel as a cleaning agent

ETL-marking

Due to space limitations, the complete ETL-marking demands are not represented on the marking plates.
The full ETL Recognized Component markings are shown here.



C/N 120690
Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1
ETL Recognized Component mark for Canada and United States



C/N 4008003
Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1
ETL Recognized Component mark for Canada and United States



C/N 4008004
Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1
ETL Recognized Component mark for Canada and United States



C/N 9901916
Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1
ETL Recognized Component mark for Canada and United States



C/N 4008671
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

Products



DPG1K

- Up/down drive

DPG1M

- Up/down drive
- 2 memory positions
- LED diode reminder
- Bluetooth®

DPG1B

- Up/down drive
- 2 memory positions
- Light strip reminder
- Bluetooth®

DPG1C

- Up/down drive
- Four favourite positions
- Light strip reminder
- Bluetooth®
- Display



- Statistics of your daily achievements (standing time and burned calories)
- Automatic connection to desk
- Up and down drive (if supported by the connected product)
- Displays actual height
- Displays error codes and links to LINAK website support
- Up to four favourite positions
- Reminder notifications when to stand up
- Possibility to enable automatic drive on memory positions (if supported by the connected product)
- Works via Bluetooth® Low Energy Technology
- Available in English, German, French, Spanish, Italian, Korean, Chinese and Japanese

Installation

Placing the DPG

The drawings below are side view examples on how to position the DPG proportionally to the edge of the tabletop.

1. Place DPG so it is easy to operate and LED is in a visible position (DPG1K does not have an LED).

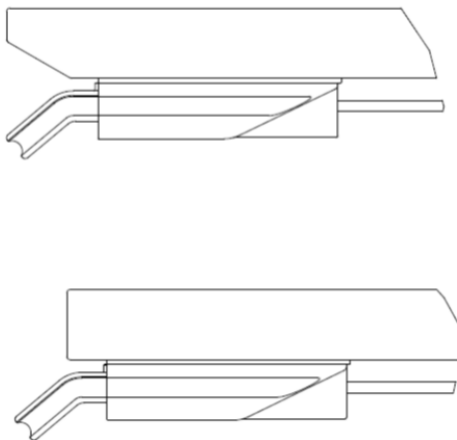


Figure 1: Alignment in proportion to tabletop edge

Front label

The DPG (SW 1.29 and later from factory) is delivered with the removable product label attached to the display.

1. Peel the label off and place it on a visible spot, so the information is easily available.



Figure 2: Removable product label

Mounting the DPG

The DPG series consists of four different desk panels in two different sizes. The DPG1K and the DPG1M are the same size and the DPG1B and the DPG1C are the same size.

We recommend predrilling the holes for the DPG to ensure the same aligned position for all desks.

The two sizes share one hole in the hole pattern, which means three predrilled holes in the tabletop will make it possible to mount both sizes of the DPG and all 4 versions.

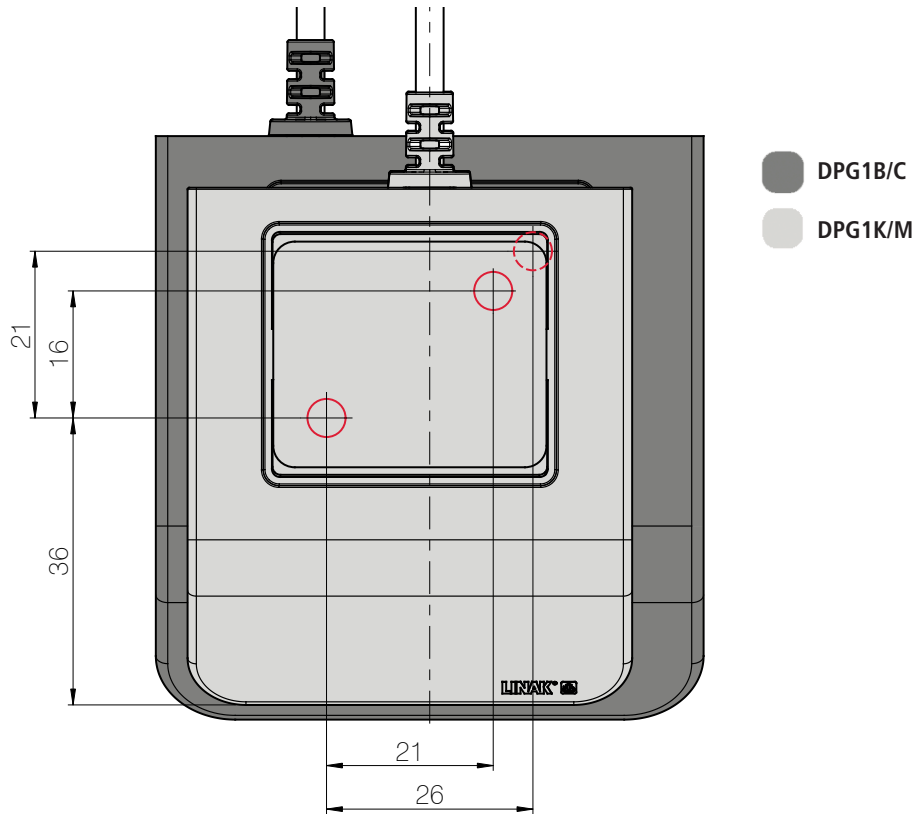


Figure 3: Hole pattern of the DPG sizes. The dashed line is the second hole of the DPG1B/C

All four DPG variants share the front hole indicated by the green line.
The DPG1K and the DPG1M are the same size and share the hole indicated by the red line.
The DPG1B and the DPG1C are the same size and share the hole indicated by the black line.



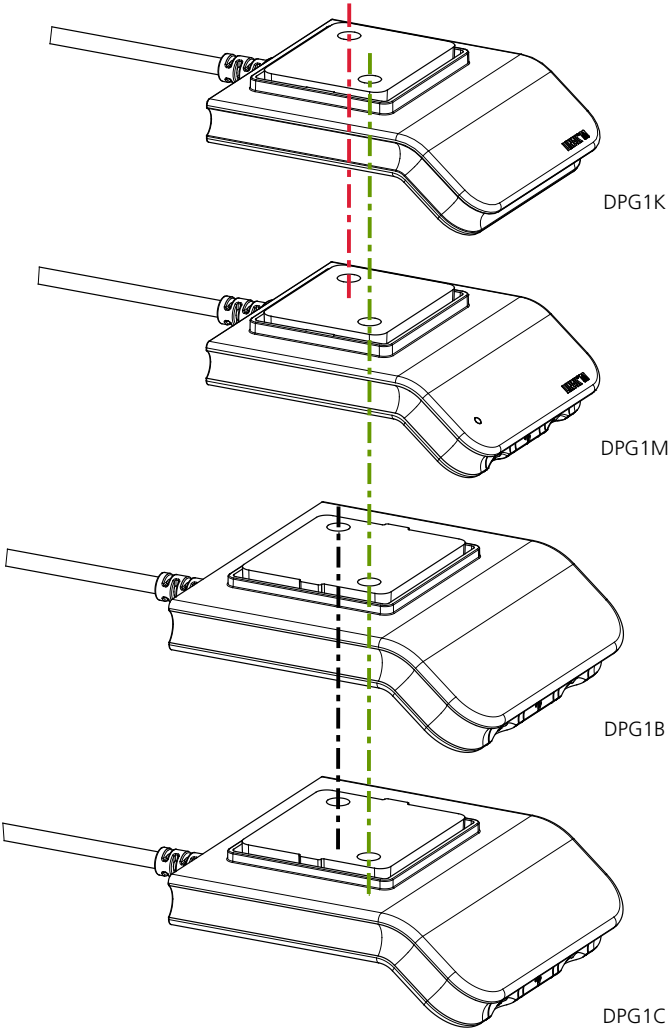


Figure 4: Holes shared by the various DPGs


1. Predrill holes.

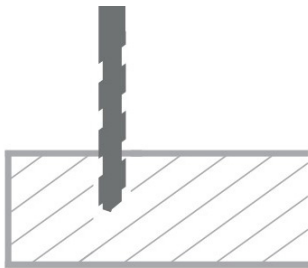

If no holes are predrilled, a bulge of wood might occur between the tabletop and the DPG – which causes the DPG not to be tightened sufficiently to the tabletop. This might lead to incorrect functionality of the DPG.

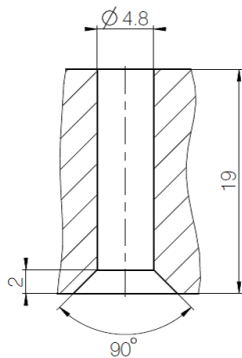


DPG with cover
Max. screw length:
19 mm + thickness of the tabletop

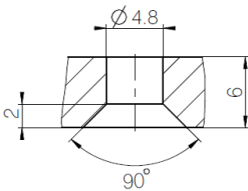

DPG without cover
Max. screw length:
6 mm + thickness of the tabletop

2. Use correct screws

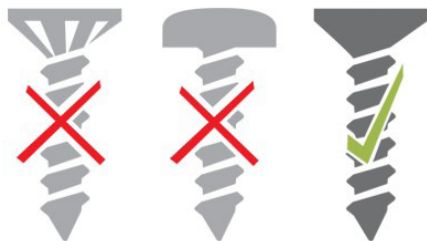

Mount the DPG to the tabletop using screws with the following specifications:


- Ø4.5 mm
- 90° countersink screw



Do not use screws with a milling head as they will cut into the housing of the DPG.


The screws must be fastened sufficiently without being overtightened. It is not possible to mention a specific torque as this depends on the type of screw, the material of tabletop and whether there are predrilled holes or not.

3. Do not overtighten screws.

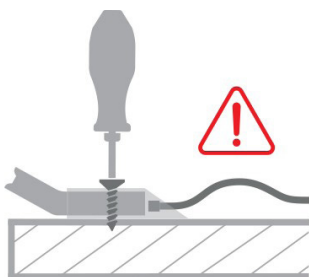

The screws must be fastened sufficiently, but without damaging the plastic.

4. Mount DPG and make sure that cable is not tightened too much.

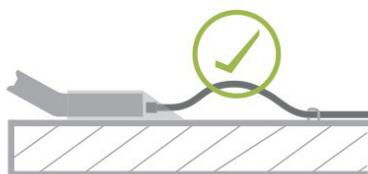

When mounting the DPG, it is important to ensure that the cable is not tightened but has free mobility in the first centimetres from the housing. We recommend attaching the cable to the tabletop with a clip as shown on the drawing above.

Find more information about how to use the DPG in this short film: [\(link\)](#)

The above-mentioned link is directly accessible via the label on the cover of the DPG. Use either the QR code or type in the web address.

Operation

DPG1K

Operate the desk panel by tilting it.

1. Tilt and hold up DPG1K to drive desk up, press and hold down DPG1K to drive desk down.
2. Release DPG1K when you have reached your requested position.

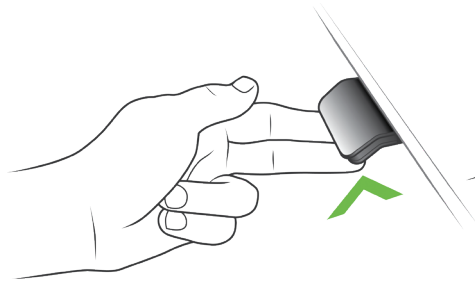


Figure 5: Tilt and hold the DPG1K to drive the desk up

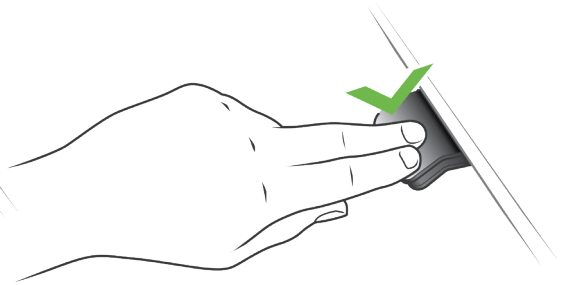


Figure 6: Press and hold the DPG1K to drive the desk down

DPG1M

The DPG1M has three operation buttons.



Figure 7: DPG1M operation buttons

Each button has a specific function:

Symbol	Description	Function
	Reminder	Setting reminders
	Bluetooth®	Connecting the Desk Control™ App via Bluetooth® wireless technology
	Favourite	Saving favourite positions

Operate the desk panel by tilting it.

- 1. Tilt and hold up DPG1M to drive desk up, press and hold down DPG1M to drive desk down.
- 2. Release DPG1M when you have reached your requested position.

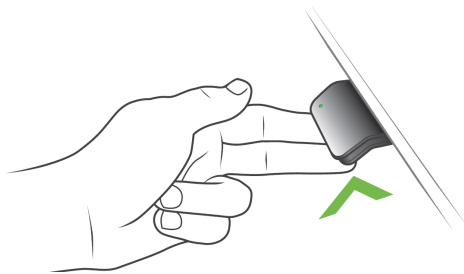


Figure 8: Tilt and hold the DPG1M to drive the desk up

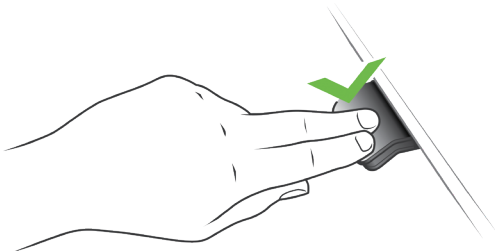


Figure 9: Press and hold the DPG1M to drive the desk down

Desk height limits

In case the desk cannot be operated in its entire span (e.g. a shelf is blocking the upwards movement or a filing cabinet is placed under the desk and blocking the downwards movement), it is possible to set an upper limit and a lower limit for the desk height.

Setting upper limit

- 1. Adjust desk to maximum allowable height.
- 2. Press and tilt DPG1M up at the same time until light flashes.
- 3. Release and DPG1M.

Setting lower limit

- 1. Adjust desk to minimum allowable height.
- 2. Press and press DPG1M down at the same time until light flashes.
- 3. Release and DPG1M.

Favourite positions

Saving favourite positions

1. Adjust desk to a preferred position.
2. Press ★ button for two seconds.

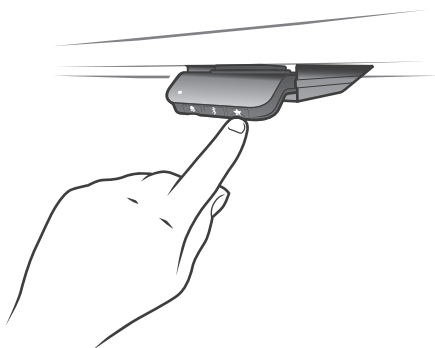


Figure 10: Saving favourite positions

The LED flashes white two times to indicate that saving the position is in progress. Not until the LED becomes static white, has the position been saved.

If the user adjusts the desk to another position and saves this position, it will overwrite the favourite position closest to the current position.

Driving to favourite positions

After saving the favourite positions, the user can reach the positions simply by tilting/pressing the DPG1M.

1. Tilt/press and hold - when a saved position has been reached, the desk stops.
2. Release DPG1M within one second.

This way the user can easily change between sitting and standing height without looking at the DPG1M in the meantime.

When the desk stops at a favourite position, the user can

- continue to tilt/press the DPG1M for one second

or

- release the DPG1M and immediately tilt/press it again.

The desk will move past the favourite position and continue its movement.

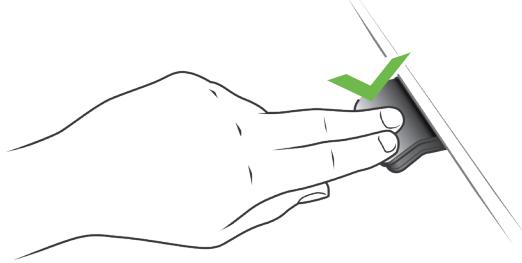


Figure 11: Tilt/press to drive desk

Automatic driving to favourite positions

(only possible for "Full version" with "Automatic drive" enabled in the app)

1. Double-tap DPG1M to let desk adjust automatically to first position in direction of double-tap.
2. Simply tap DPG1M once to stop driving of desk between two favourite positions.

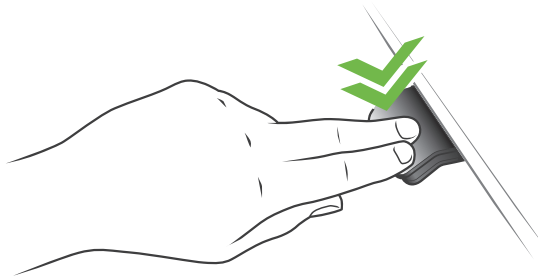


Figure 12: Double-tap to automatically adjust the desk to a favourite position

Erasing favourite

1. Press the ★ button for eight seconds to erase all saved favourite positions.

The LED flashes red when all the favourite positions are erased.



Figure 13: Erase favourite positions

Bluetooth®

Connecting Bluetooth®

1. The apps are called "Desk Control™" and they have the following app logo in iTunes and Apple App store, Google Play store, and Microsoft Store:



2. Press ✱ button in the middle for two seconds to enable pairing mode.

The LED flashes blue while the desk panel is in pairing mode.



Figure 14: Connect Bluetooth®

Reminder

The reminder LED is placed in the lower left corner of the DPG1M. The LED is intended to indicate the position of the desk (sitting or standing height). The indication depends on the reminder interval chosen.

While the user is sitting for an appropriate amount of time according to the set interval, the LED calmly pulsates green. When the sitting interval runs out, the calm pulsating green turns into fast pulsating orange for one minute hereafter into static orange to indicate that the user should adjust the desk to standing height. In standing height, the LED pulsates green until a potential timeout. When the desk is adjusted back to sitting height, the LED pulsates green until the reminder goes off again.

Reminder restart

The reminder automatically restarts when the desk is lowered to sitting height.

Reminder timeout

After four hours without any action, the LED will time out. When the DPG1M is tilted, the green light turns back on.



When the LED is enabled for reminders, the DPG1M is no longer in ZERO™ mode as long as the light is on/active.



Figure 15: Pulsating green LED indicates no need to drive desk up



Figure 16: Pulsating orange LED indicates that the user needs to drive his/her desk up

Reminder intervals

The LED lights up in three different intensities each representing an interval. The three standard intervals are:

- Interval 1: Reminder after 55 minutes sitting
- Interval 2: Reminder after 50 minutes sitting
- Interval 3: Reminder after 45 minutes sitting


The default interval is reminding after 55 minutes, which means the LED lights up in the weakest intensity.

Adjusting the reminder interval


1. Press 📌 button to adjust interval of getting reminded to change position.
2. Toggle through intervals by pressing 📌 button.

When the LED is not lit, the reminder is turned off.

Through the app, it is possible to personalise the three intervals to custom values.

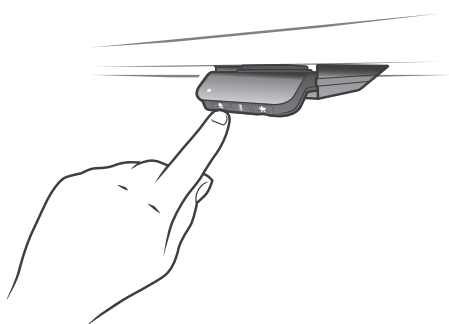

Setting reminder interval

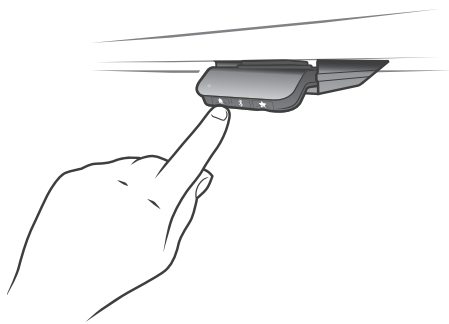

Reminder off

Figure 17: Set the reminder

Resetting the reminder

1. Press 📌 symbol for eight seconds to reset reminder to default values.
- The LED flashes red when the reminder is reset.



Figure 18: Reset reminder

Key lock

The operation of the DPG1M can be locked to prevent unintended driving of the desk. As default the key lock is disabled. If enabled, it automatically locks the DPG1M after a configured amount of time. The key lock function can also be configured to indicate attempt to operate the locked DPG1M by showing a red light.

Unlocking DPG1M

1. Press 📌, 📌 and ★ in sequence (max. one second between each button press).

DPG1B

The DPG1B has three operation buttons.

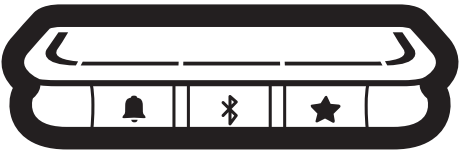


Figure 19: DPG1B operation buttons

Each button has a specific function:

Symbol	Description	Function
🔔	Reminder	Setting reminders
📶	Bluetooth®	Connecting the Desk Control™ App via Bluetooth® wireless technology
★	Favourite	Saving favourite positions

Operate the desk panel by tilting it.

- 1. Tilt and hold up DPG1B to drive desk up, press and hold down DPG1B to drive desk down.
- 2. Release DPG1B when you have reached your requested position.

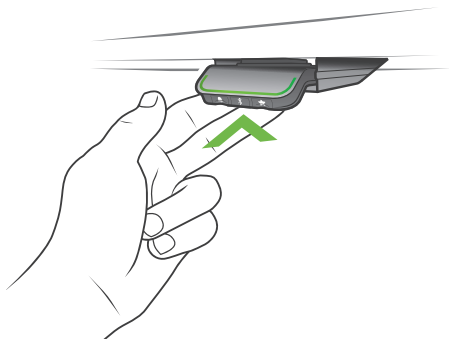


Figure 20: Tilt and hold the DPG1B to drive the desk up

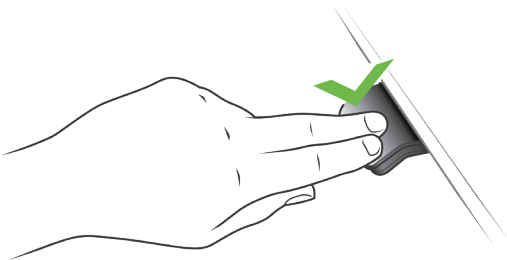


Figure 21: Press and hold the DPG1B to drive the desk down

Desk height limits

In case the desk cannot be operated in its entire span (e.g. a shelf is blocking the upwards movement or a filing cabinet is placed under the desk and blocking the downwards movement), it is possible to set an upper limit and a lower limit for the desk height.

Note:

It must always be possible to drive the desk to its minimum height in case initialisation is required. During initialisation items placed under the desk must be removed.

Setting upper limit

1. Adjust desk to maximum allowable height.
2. Press  and tilt DPG1B up at the same time for 8 seconds until light flashes.
3. Release  and DPG1B.

Setting lower limit

1. Adjust desk to minimum allowable height.
2. Press  and press DPG1B down at the same time for 8 seconds until light flashes.
3. Release  and DPG1B.

Favourite positions

Saving favourite positions 1 and 2

1. Adjust desk to a preferred position.
2. Press  button for two seconds.

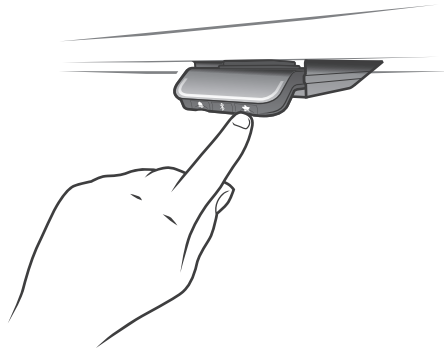


Figure 22: Saving favourite positions

The light strip flashes white two times to indicate that saving the position is in progress. Not until the light strip becomes static white, has the position been saved.

If the user adjusts the desk to another position and saves this position, it will overwrite the favourite position closest to the current position.

Driving to favourite positions

After saving the favourite positions, the user can reach the positions simply by tilting/pressing the DPG1B.

1. Tilt/press and hold - when a saved position has been reached, the desk stops.
2. Release DPG1B within one second.

This way the user can easily change between sitting and standing height without looking at the DPG1B in the meantime. The DPG1B will stop at the saved favourite position(s) which means up to two different positions during the stroke length of the desk.

When the desk stops at a favourite position, the user can

- keep tilting/pressing the DPG1B for more than one second
or
- release the DPG1B and immediately tilt/press it again.

The desk will move past the favourite position and continue its movement.

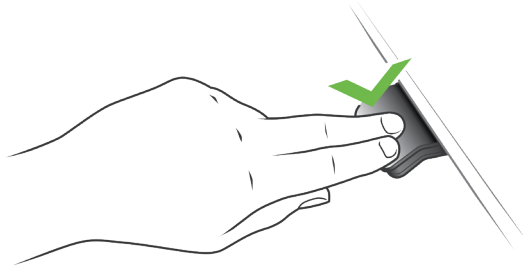


Figure 23: Tilt/press to drive desk

Automatic driving to favourite positions

(only possible for "Full version" with "Automatic drive" enabled in the Desk Control™ App)

1. Double-tap DPG1B to let desk adjust automatically to first position in direction of double-tap.
2. To stop driving of desk between two favourite positions, simply tap DPG1B once.



Figure 24: Double-tap to automatically adjust the desk to a favourite position

Erasing favourite positions

1. Press the ★ button for eight seconds to erase all saved favourite positions.

After five seconds, the light strip flashes red when all the favourite positions are erased.



Figure 25: Erase favourite positions

Bluetooth®

Connecting Bluetooth®

1. The apps are called "Desk Control™" and they have the following app logo in iTunes and Apple App store, Google Play store, and Microsoft Store:



2. Press  button in the middle for two seconds to enable pairing mode.

The light strip flashes blue while the desk panel is in pairing mode.

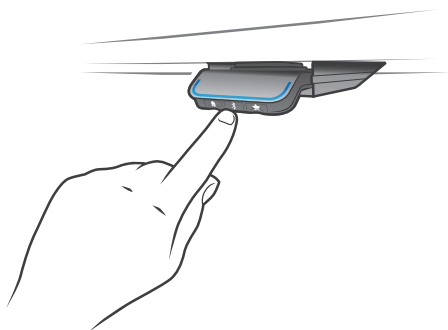


Figure 26: Connect Bluetooth®

Reminder

The reminder LED lights through the surface of the DPG1B. The light is intended to indicate the position of the desk (sitting or standing height). The indication depends on the reminder interval chosen.

If two favourite positions are saved, they will indicate sitting and standing height. If no favourite positions are saved, the sitting height will be the lowest possible height and the standing position will be sitting height plus 30 cm.

Heartbeat (light strip)

The heartbeat reminder is shown as a thin LED light strip. While the user is sitting for an appropriate amount of time according to the set interval, the light strip calmly pulsates green symbolising a heartbeat. When the sitting interval runs out, the calm pulsating green turns into fast pulsating orange for one minute hereafter into static orange to indicate that the user should adjust the desk to standing height. In standing height, the light strip pulsates green until a potential timeout (standard timeout is four hours). When the desk is adjusted back to sitting height, the light strip pulsates green until the reminder goes off again.

Reminder restart

The reminder automatically restarts when the desk is lowered to sitting height.

Reminder timeout

After four hours without any action, the light strip will time out. When the DPG1B is tilted, the green light turns back on.



When the light (strip or blocks) is enabled for reminders, the DPG1B is no longer in ZERO™ mode as long as the light is on/active.



Figure 27: Heartbeat - pulsating green light strip indicates no need to drive desk up



Figure 28: Heartbeat - pulsating orange light strip indicates that the user needs to drive his/her desk up

Reminder intervals

The number of white blocks (one, two or three) each representing an interval. The three standard intervals are:

- Interval 1: Reminder after 55 minutes sitting
- Interval 2: Reminder after 50 minutes sitting
- Interval 3: Reminder after 45 minutes sitting


The default interval is reminding after 55 minutes, which means one white block lights up.

Adjusting the reminder interval


1. Press  button to adjust interval of getting reminded to change position.
2. Toggle through intervals by pressing  button.
3. Release  button when desired interval is indicated.

When no white blocks are lit up, the reminder is turned off.


Through the app, it is possible to personalise the three intervals to custom values.

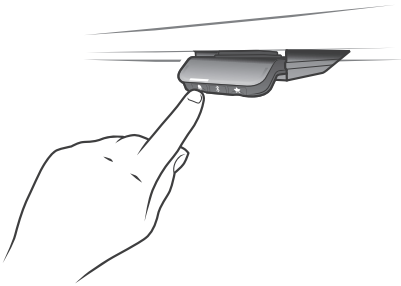


Interval 1: Reminder after 55 minutes sitting

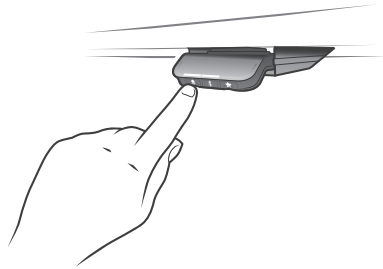

Interval 2: Reminder after 50 minutes sitting

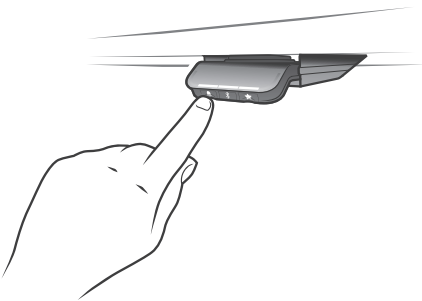

Interval 3: Reminder after 45 minutes sitting

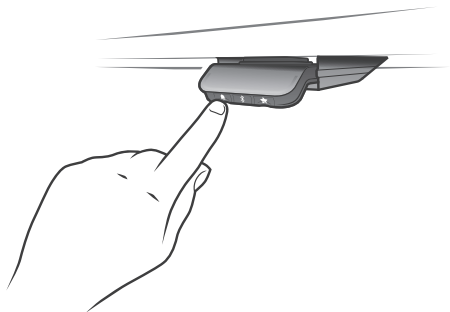

Reminder off

Figure 30: Set the reminder

Resetting the reminder

1. Press  symbol for eight seconds to reset reminder to default values.

After five seconds, the light strip flashes red when the reminder is reset.



Figure 31: Reset reminder

Key lock

The operation of DPG1B can be locked to prevent unintended driving of the desk. As default the key lock is disabled. If enabled, it automatically locks the DPG1B after a configured amount of time. The key lock function can also be configured to indicate attempt to operate the locked DPG1B by showing a red light.

Unlocking DPG1B

1. Press ,  and  in sequence (max. one second between each button press).

DPG1C

The DPG1C has three operation buttons.

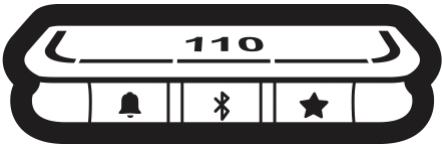


Figure 32: DPG1C operation buttons

Each button has a specific function:

Symbol	Description	Function
	Reminder	Setting reminders
	Bluetooth®	Connecting the Desk Control™ App via Bluetooth® wireless technology
	Favourite	Saving favourite positions

Display

The DPG1C has an OLED display, which shows the height during drive of the desk and many other texts to guide the users.

Adjusting the displayed height of the desk

If the height shown in the display is not correct, it can be adjusted.

- 1. Press and the buttons on the DPG1C at the same time for five seconds and the height in the display starts to flash.
- 2. Tilt the DPG1C to change the displayed height without moving the desk. Tilt up to increase the displayed height, tilt down to decrease the displayed height.
- 3. Press any button to confirm the height or wait for 10 seconds for automatic confirmation.

Changing the measurement unit

The measurement unit shown in the display can be set to either cm or inch.

- 1. Press and buttons on DPG1C at the same time for five seconds and the current measurement unit flashes in display.
- 2. When e.g. "CM" flashes in display, tilt DPG1C once to change measurement unit to inch. "INCH" now flashes in display.
- 3. Press any button to confirm measurement unit or wait for 10 seconds for automatic confirmation.

Operate the desk panel by tilting it.

1. Tilt and hold up DPG1C to drive desk up, press and hold down DPG1C to drive desk down.
2. Release DPG1C when you have reached your requested position.

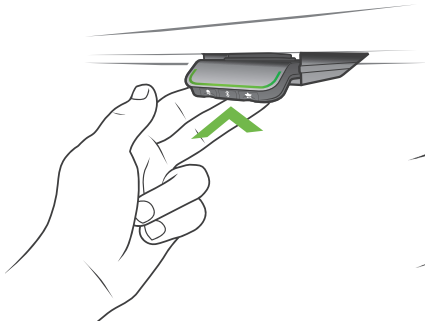


Figure 33: Tilt and hold the DPG1C to drive the desk up

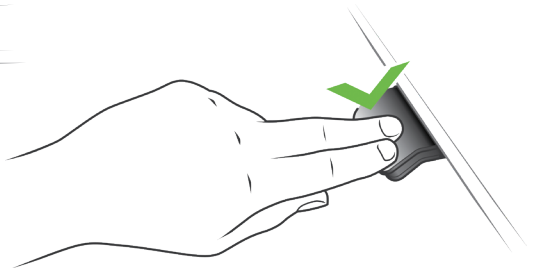


Figure 34: Press and hold the DPG1C to drive the desk down

Desk height limits

In case the desk cannot be operated in its entire span (e.g. a shelf is blocking the upwards movement or a filing cabinet is placed under the desk and blocking the downwards movement), it is possible to set an upper limit and a lower limit for the desk height.

Note:

It must always be possible to drive the desk to its minimum height in case initialisation is required. During initialisation items placed under the desk must be removed.

Setting upper limit

1. Adjust desk to maximum allowable height.
2. Press  and tilt DPG1C up at the same time for 8 seconds until light flashes.
3. Release  and DPG1C.

Setting lower limit

1. Adjust desk to minimum allowable height.
2. Press  and press DPG1C down at the same time for 8 seconds until light flashes.
3. Release  and DPG1C.

Favourite positions

Saving favourite positions 1 and 2

1. Adjust desk to a preferred position.
2. Press ★ button for two seconds.

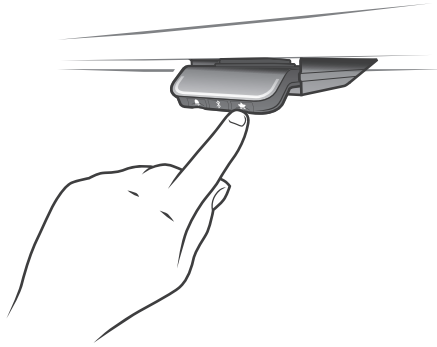


Figure 35: Saving favourite positions

The light strip flashes white two times to indicate that saving the position is in progress. Not until the light strip becomes static white, has the position been saved. The display indicates the saved position with a ★ and a position number. The number next to the ★ indicates the order in which the positions are saved.

- First position saved: "1" is displayed next to the ★.
- Second position saved: "2" is displayed next to the ★.

If the user adjusts the desk to another position and saves this position, it will overwrite the favourite position (1 or 2) closest to the current position.

Saving favourite positions 3 and 4

1. Press ★ button shortly to make display toggle through the four favourite positions (with position ★ number next to it).
2. Toggle through these four favourite positions in display and choose which one to save current position as.

E.g. a user wants to save the current position as favourite position 3:

3. Press the ★ button and toggle to the ★ with "3" next to it.
4. Press ★ button for two seconds and favourite position is saved.

Note:

Favourite positions 3 and 4 can be disabled via the DPG configurator (from DPG SW ver. 1.29).

Driving to favourite positions

After saving the favourite positions, the user can reach the positions simply by tilting/pressing the DPG1C.

1. Tilt/press and hold - when a saved position has been reached, the desk stops.
2. Release DPG1C within one second.

This way the user can easily change between sitting and standing height without looking at the DPG1C in the meantime. During desk driving, the display will show the height of the desk. When a favourite position has been reached, the display shows a ★ and the position number.

The DPG1C stops at all saved favourite positions, which means up to four different positions during the stroke length of the desk.

When the desk stops at a favourite position, the user can

- keep tilting/pressing the DPG1C for more than one second
or
- release the DPG1C and immediately tilt/press it again.

The desk will move past the favourite position and continue its movement.

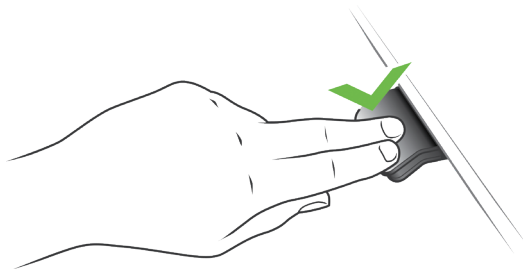


Figure 36: Tilt/press to drive desk

Automatic driving to favourite positions

(only possible for "Full version" with "Automatic drive" enabled in the Desk Control™ App)

1. Double-tap DPG1C to let desk adjust automatically to first position in direction of double-tap.
2. To stop driving of desk between two favourite positions, simply tap DPG1C once.



Figure 37: Double-tap to automatically adjust the desk to a favourite position

Erasing favourite positions

1. Press the ★ button for eight seconds to erase all saved favourite positions.

After five seconds, the display shows a countdown, and the light strip flashes red when all the favourite positions are erased.



Figure 38: Erase favourite positions

Bluetooth®

Connecting Bluetooth®

1. The apps are called "Desk Control™" and they have the following app logo in iTunes and Apple App store, Google Play store, and Microsoft Store::



2. Press  button in the middle for two seconds to enable pairing mode.

The display on the DPG1C will inform about the Bluetooth® ID of the desk, which is "DESK" followed by a four-digit number – look for this ID in the list of "Desks nearby" in the Desk Control™ App.

The light strip flashes blue while the desk panel is in pairing mode.

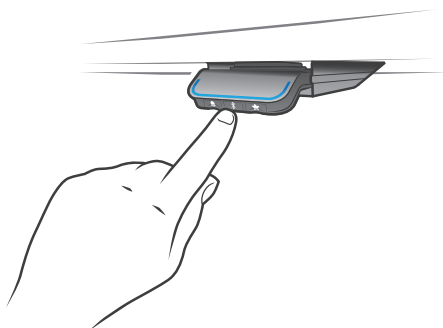


Figure 39: Connect Bluetooth®

Reminder

The reminder LED lights through the surface of the DPG1C. The light is intended to indicate the position of the desk (sitting or standing height). The indication depends on the reminder interval chosen.

Heartbeat (light strip)

The heartbeat reminder is shown as a thin LED light strip. While the user is sitting for an appropriate amount of time according to the set interval, the light strip calmly pulsates green symbolising a heartbeat. When the sitting interval runs out, the calm pulsating green turns into fast pulsating orange for one minute hereafter into static orange to indicate that the user should adjust the desk to standing height. In standing height, the light strip pulsates green until a potential timeout (standard timeout is four hours). When the desk is adjusted back to sitting height, the light strip pulsates green until the reminder goes off again.

Reminder restart

The reminder automatically restarts when the desk is adjusted to sitting height.

Reminder timeout

After four hours without action, the light strip will time out. When the DPG1C is tilted, the green light turns back on.



When the light (strip or blocks) is enabled for reminders, the DPG1C is no longer in ZERO™ mode as long as the light is on/active.

Reminder intervals

The number of white blocks (one, two or three) each representing an interval. The three standard intervals are:

- Interval 1: Reminder after 55 minutes sitting
- Interval 2: Reminder after 50 minutes sitting
- Interval 3: Reminder after 45 minutes sitting


The default interval is reminding after 55 minutes, which means one white block lights up.

Adjusting the reminder interval


1. Press  button to adjust interval of getting reminded to change position.
2. Toggle through intervals by pressing  button.
3. Release  button when desired interval is indicated.

When no white blocks are lit up, the reminder is turned off.


Through the app, it is possible to personalise the three intervals to custom values.

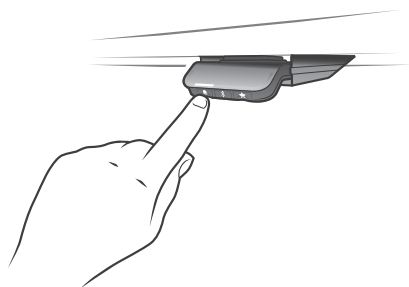


Interval 1: Reminder after 55 minutes sitting

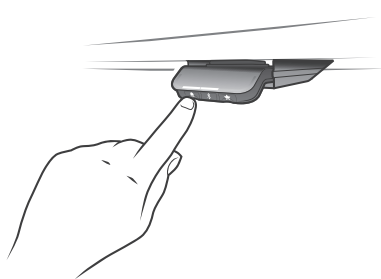

Interval 2: Reminder after 50 minutes sitting

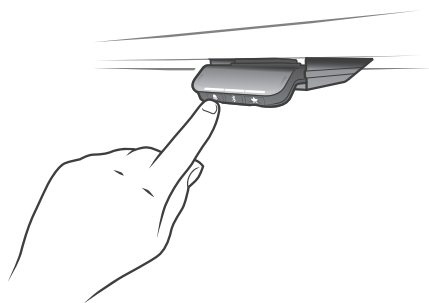

Interval 3: Reminder after 45 minutes sitting

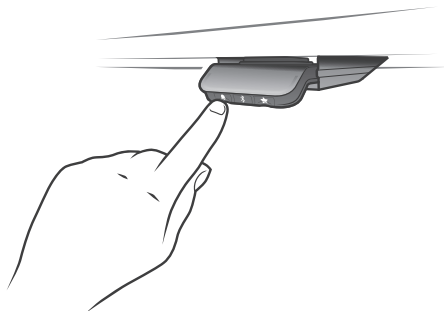

Reminder off

Figure 40: Set the reminder

Resetting the reminder

1. Press 📌 symbol for eight seconds to reset reminder to default values.

After five seconds the display shows a countdown and the light strip flashes red when the reminder is reset.

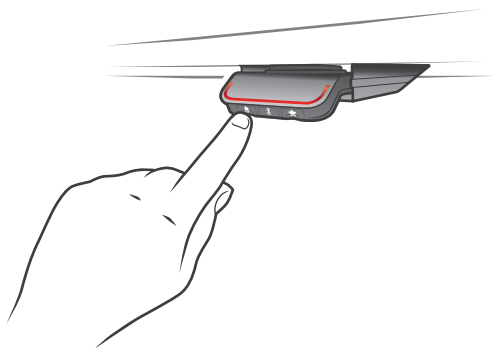


Figure 41: Reset reminder

Key lock

The operation of DPG1C can be locked to prevent unintended driving of the desk. As default the key lock is disabled. If enabled, it automatically locks the DPG1C after a configured amount of time. The key lock function can also be configured to indicate attempt to operate the locked DPG1C by showing a red light and a 🔒.

Unlocking DPG1C

1. Press 📌, ⚡ and ★ in sequence (max. one second between each button press).

Troubleshooting/FAQs

Error codes (only DPG1C)

The DPG1C shows error codes generated in the CBD6S in case of errors in the system. The most common errors loop between the error code (EXX) and the error text, check the codes below:

Error codes	Cause
E53-E64	COLLISION
E41-E52	OVERLOAD
E01	INITIALISATION



Software versions before SW 1.13 only show error E01.

Factory reset (only DPG1M, DPG1B and DPG1C)

Press and hold the  and  buttons for eight seconds to set the DPG to factory default. The LED/light strip flashes red three times to indicate the reset is done. If a factory reset is performed, it sets the DPG back to the configured state, i.e. all configurations made in the DPG configurator will not be reset – only the settings changed directly on the DPG or in the app by the end users will be reset.

DPG1C only

During reset, the display lights up after five seconds, showing an arrow with a countdown [seconds] and RESET

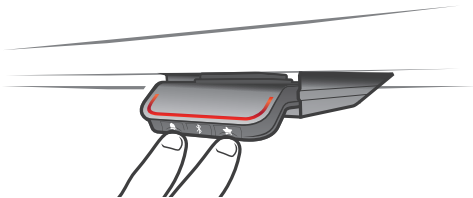


Figure 42: Reset to factory default (DPG1B and DPG1C)

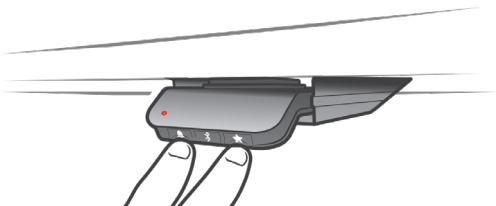


Figure 43: Reset to factory default (DPG1M)

Bluetooth® Adapter BLE2LIN002/BLE2LIN003

The Bluetooth® Adapter, for DESKLINE® control boxes connects basic adjustable desks with mobile devices or a computer.

Use the Bluetooth® Adapter to connect to your desk with the Desk Control™ App for Android, iOS and Windows 10. Simply plug the adapter into your DESKLINE® control box, download the app, pair the adapter with your smart-phone, tablet, or computer, and your application can now be adjusted via the app.

The Bluetooth® Adapter is a very compact unit requiring a minimum of space. No mounting is needed, just plug in the adapter and you are ready.

Usage:

- Ambient temperature: 5 to 40 °C
- Storage and transport temperature: -10 to +50 °C



Compatibility

Bluetooth® Adapter and DESKLINE® control boxes

Control box	CBD4	CBD6S
BLE2LIN002 SW0077086 v.1.05	Only with SW 77432 or 77474	SW03002000 All versions
BLE2LIN003 SW0077087 v.1.05	Only with SW 77432 or 77474	SW03002000 All versions

Bluetooth® Adapter and apps

Product	Desk Control™ App	Desk Control™ Basic App	Desk Control™ Basic SW
BLE2LIN002	Full functionality	Full functionality	Full functionality
BLE2LIN003	Limited functionality	No functionality	Limited functionality

Approvals

BLE2LIN002	BLE2LIN003
• FCC ID (PART 15C) • IC (RSS247) • Giteki (Japan) • KC certification (Korea)	• FCC ID (PART 15C) • IC (RSS247)

Installation

Pairing the adapter

1. Download the software you want in App Store or Google Play store and follow the instructions in the programs.
2. Plug Bluetooth® Adapter into a powered control box.

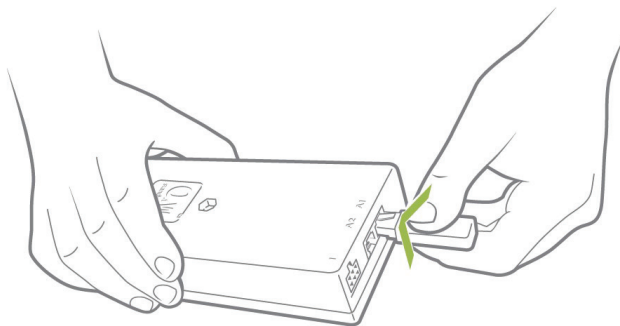


Figure 44: Plugging Bluetooth® adapter into control box

The pairing mode will last three minutes and is indicated with a blue flashing LED light that is visible through the transparent plastic. It can take up to ten seconds before pairing mode starts.

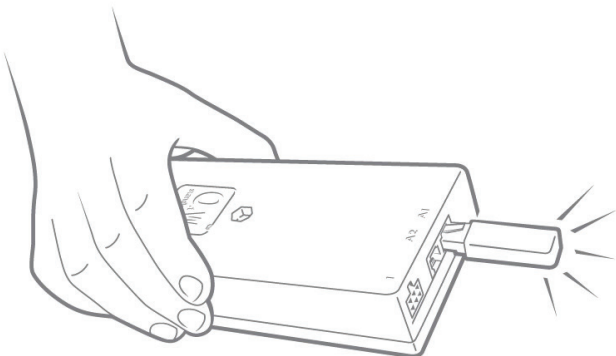


Figure 45: Bluetooth® adapter in pairing mode

3. For further instructions, [watch our video](#).

The Bluetooth® ID of each device is "BLE2LIN" followed by a 4-digit number, which is also shown on the product label.

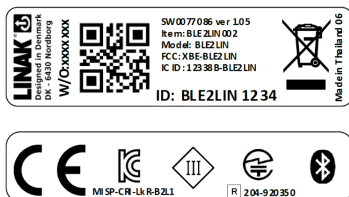


Figure 46: Bluetooth® adapter product labels showing the unique ID

Each time you activate your DESKLINE® application, the adapter will be in pairing mode for 30 seconds.

Desk Control™ App

The Desk Control™ App is developed for users of sit-stand desks, who want to come one step closer to changing the prolonged sitting behaviour. Friendly reminders urge you to change position and extensive statistics show you your daily achievements - all to help you build a healthy routine during the workday. Via the app the desk can also be adjusted, and the user can drive to pre-stored memory positions.

The app is available for three different platforms: iOS for iPhones and iPads, Android for Android smartphones and tablets, and a desktop version for Windows 10. The Desk Control™ app comes in multiple languages, which can be selected in the app.



The app is connected to the desk via Bluetooth® wireless technology integrated in either of the LINAK® Desk Panels DPG1M, DPG1B, or DPG1C, or the BLE2LIN Bluetooth® adapter.

Downloading apps

The apps are called "Desk Control™" and they have the following app logo in iTunes and Apple App store, Google Play store, and Microsoft Store:



How to download the App for iOS:

- Step 1:** Use your iPhone or iPad to log into Apple App store
- Step 2:** Type "Desk Control" in the search column
- Step 3:** Select the "Desk Control" app
- Step 4:** Click install to download the app to your device

You can also scan this QR code to reach the Apple App Store:



How to download the App for Android:

- Step 1:** Use your Android device to log into Google Play Store
- Step 2:** Type "Desk Control" in the search column
- Step 3:** Select the "Desk Control" app
- Step 4:** Click install to download the app to your device

You can also scan this QR code to reach the Google Play Store:




How to download the app for Windows:

- Step 1:** Click on the Windows icon on your computer and go to Microsoft Store
- Step 2:** Type "Desk Control" in the search field
- Step 3:** Select the "Desk Control" app
- Step 4:** Click "Get" to download the app to your computer


Getting started

When you open the app, a list of options available in the app is displayed. If you swipe to the left on your smart device or click on the white dot with your mouse, a list of benefits of changing posture during the day displays.

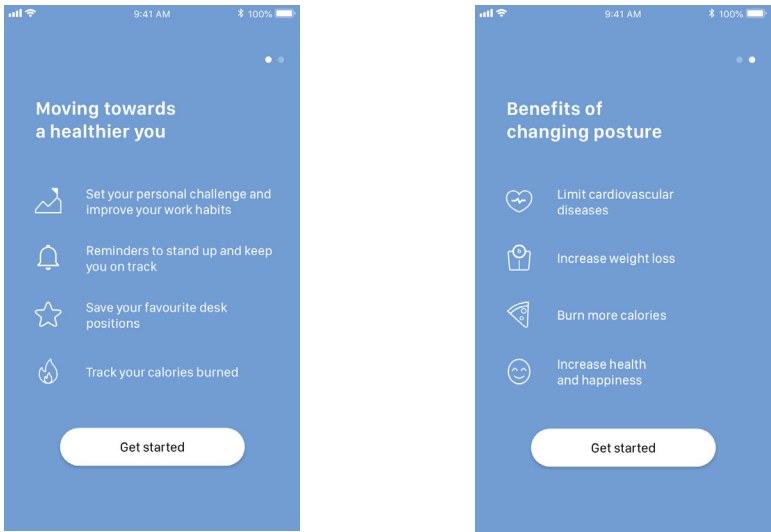


Press/click “Get started” on either screen.

For Android only:
Enable GPS location to allow the app to scan for Bluetooth® devices. If not done, the app will not be able to detect desks nearby in pairing mode and thus not work.

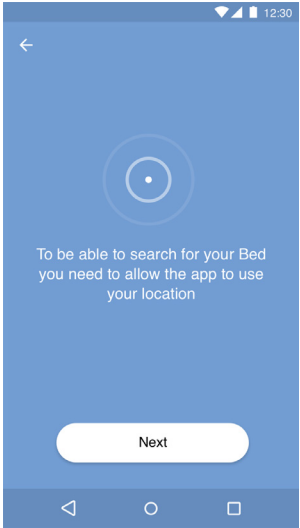


Terms and Conditions

Before you can start using the app, you need to agree to the Terms and Conditions for use of the app.

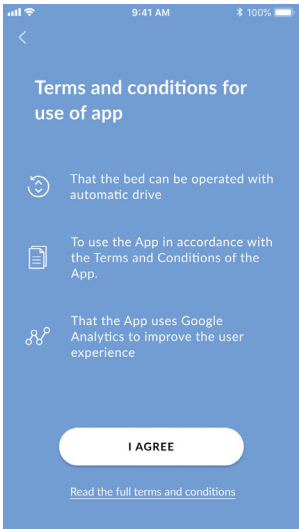

Press “Read the full terms and conditions” to read the terms before pressing “I AGREE”.

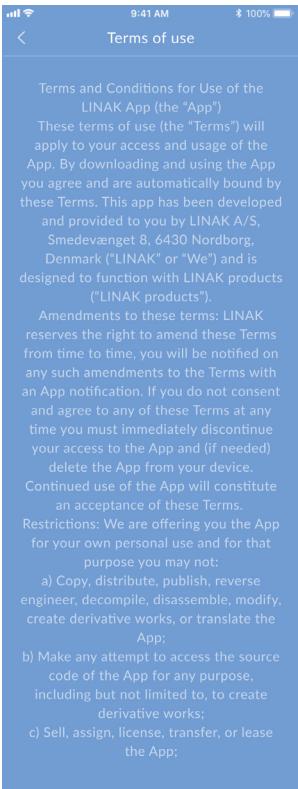

Onboarding flow


The app now automatically starts searching for desks in pairing mode nearby in and the ID of the first desk found is displayed. If this is the desk you want to use, press/click *“Connect to desk”*. If not, press/click *“This is not my desk”* to view a list of desks nearby. If the desk is not on the list, set the desk panel in pairing mode to get the desk added to the list.

Press the Bluetooth® button on the front of the desk panel (DPG1M, DPG1B or DPG1C) for two seconds. The LED light or LED light strip flashes blue to indicate that the desk panel is in pairing mode.

All Bluetooth® adapters have IDs named “BLE2LIN” followed by a four-digit number.


All Desk Panels DPG have IDs named “DESK” followed by a four-digit number.

Press/click on any desk ID to connect to that desk.

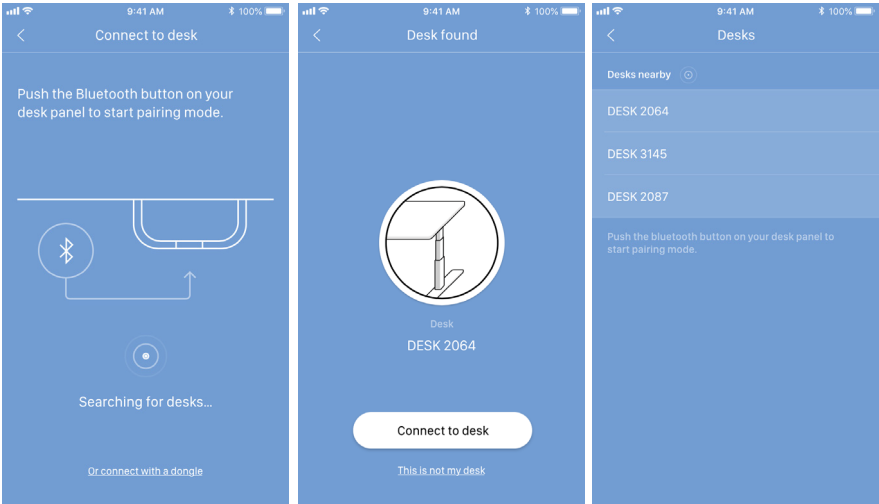


In case the desk panel does not have integrated Bluetooth®, press/click *“Or connect with a dongle”* to use a Bluetooth® adapter for pairing. Please remember to enable Bluetooth® on your smart device/computer.

Plug the Bluetooth® adapter into the DESKLINE® control box. The adapter flashes blue and will be in pairing mode for three minutes.

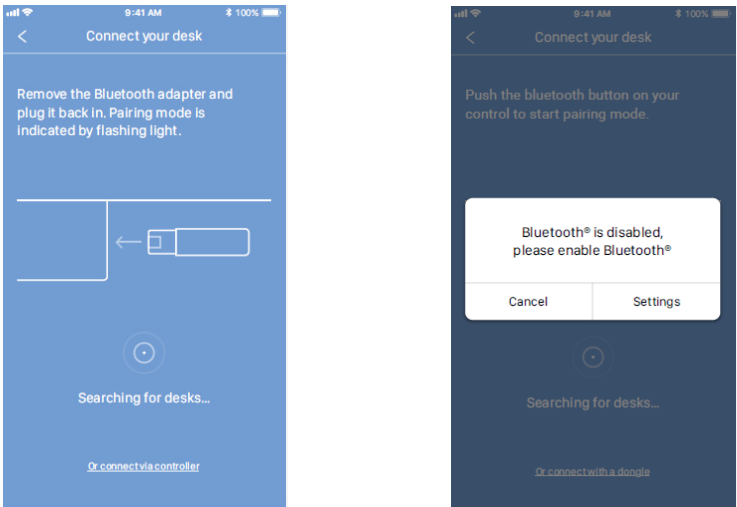

Before the app is connected to the desk selected, you must select whether this is your primary desk (select "Owner") or if you use this desk temporarily (select "Guest"). Press/click "Connect" to connect the app to the desk.

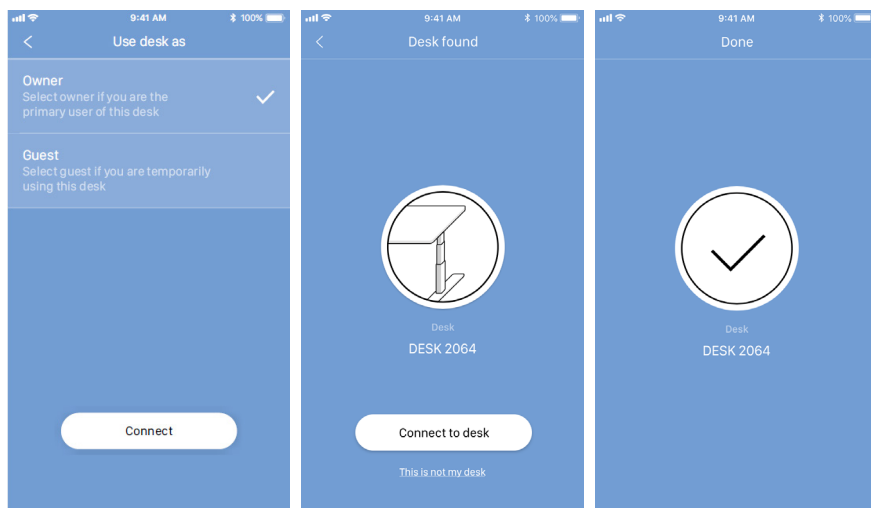


You can connect to several desks, either as "Owner" or as "Guest".

- If you connect as "Owner", your reminder and favourite settings are stored in the DPG on the desk and your app will automatically connect to this desk when you arrive at it and track the statistic stand data throughout the day.
If you use the Bluetooth® adapter, your reminder and favourite settings are stored in the control box/dongle.
- If you connect as "Guest", your reminder and favourite settings are stored on your smart device/computer and when you connect to a desk, these settings will reflect in the DPG. You need to pair the app on your smart device/computer with the desk every morning. When the app has been disconnected from the desk for two hours, the DPG will go back to the settings it had before you connected, however, the rest of the day the app will automatically connect to this desk and send standing notification and keep track of stand data.


Setting your challenges

When the app on your smart device/computer is connected to the desk, you are prompted to pick a challenge and start using your desk more actively. You can choose between three standard challenges. Select one and press/click "Next". If desired, you can enter your gender, weight and height and find out how many calories you burn while standing during the day. If you choose the default settings, you will still see the calories burned, however, they will be based on the default gender, weight and height.

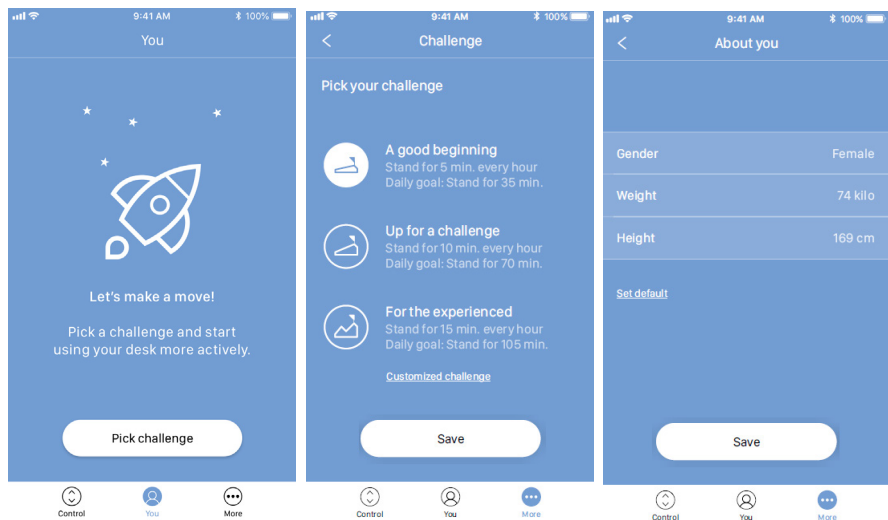

Please note that if an interval for standing/sitting has already been chosen via the DPG, these settings will be shown in the app. Either keep these or select a new challenge.

Once you have set your challenge, you can choose to get reminders when it is time to stand up. To receive reminders on iOS and Android devices, you need to allow the Desk Control™ app to send notifications.

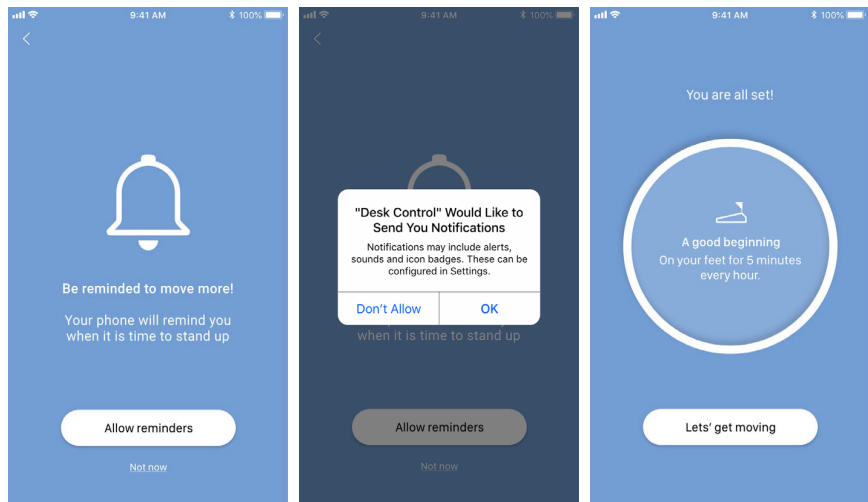

(Only iOS and Android)

Now you are ready to become a healthier you.

Operation

How to use the app

The Desk Control™ App consists of three different tabs to navigate between: "You", "Control" and "More".



Control

Adjustment of the desk (if supported by connected the device)



You

Your goal and the statistics of your daily achievements




More


All settings

You


When your settings are done, you will see the main page, "You", giving you a fast overview of today's statistics together with a motivating text and icon to keep you going. Press/click "Overview" to get a calendar overview of your daily achievements. Press/click "Today" to get back to the main page.

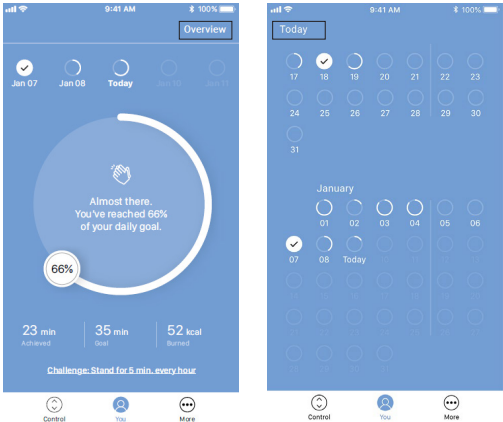




"You" is the page where you can view how close you are to reaching your daily goal. The progress is shown in percentage of your set goal and you will also see an incentive text and an icon. Should you stand more than your set goal, you will see an encouragement to pick a new challenge.

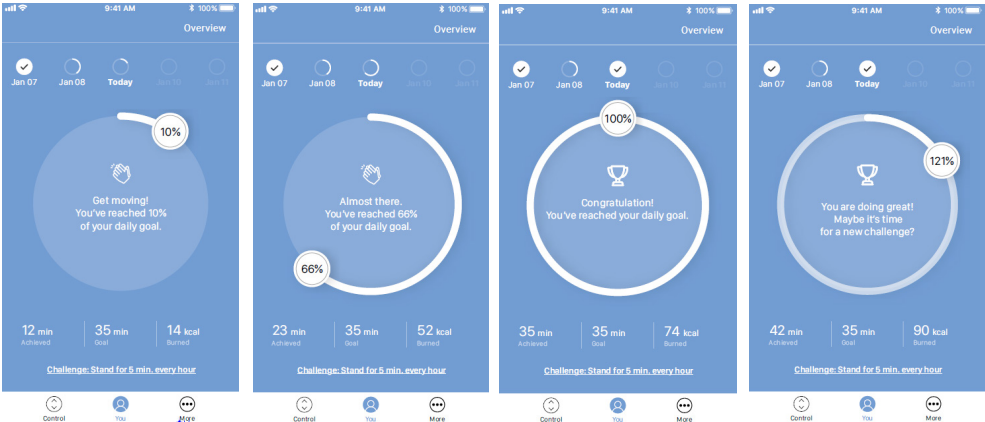

If you press/click "Overview", you will see your daily achievements in a calendar overview. You can scroll to see older data.

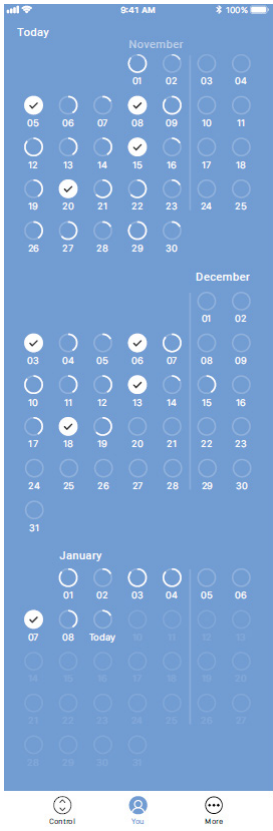

Press/click any of the dates to see your achievement for that day.

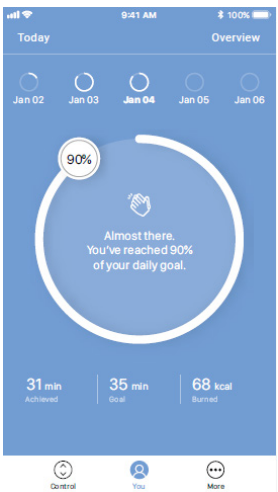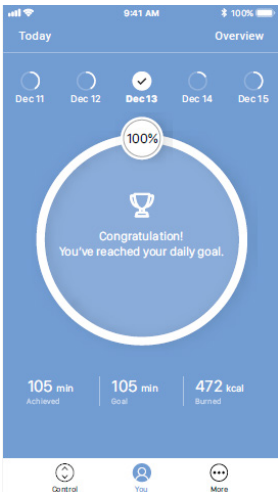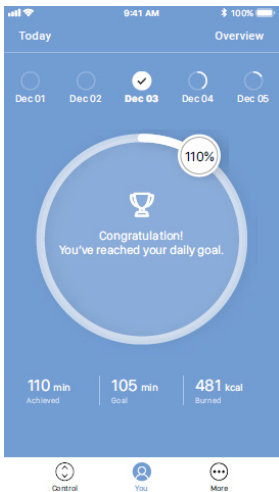


Control

The screen below shows when the app is connected to a "full version" of a DPG or Bluetooth® Adapter. With a "Limited version" of the DPG or Bluetooth® Adapter the following is **not** possible:

- desk height adjustment via the app
- automatic drive to favourite positions
- saving favourite positions.

The graphics will adjust to the possibilities.

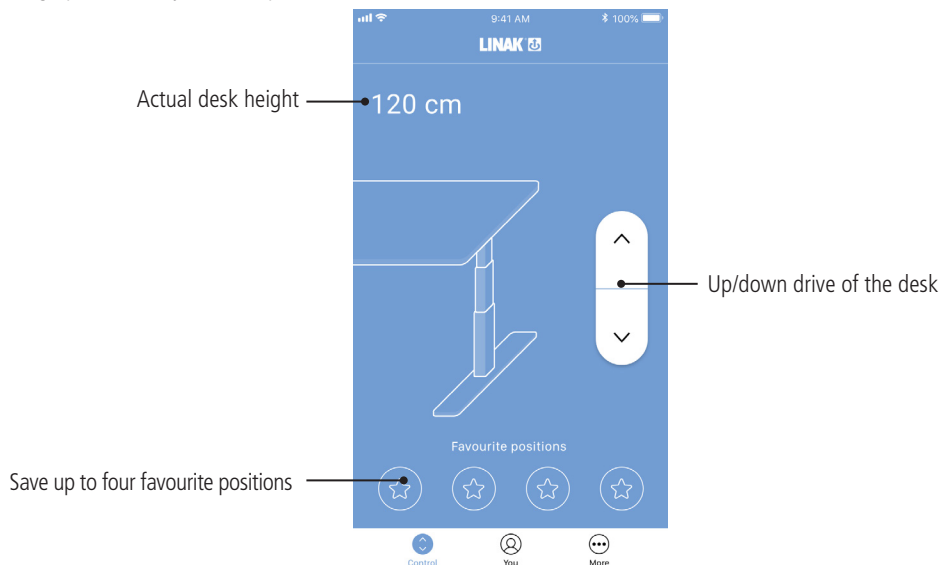

Height

Actual desk height. In case an error occurs, the error code will be displayed instead of the height (does not apply to the Windows app).

Up/down drive

Press/click and hold the button to move the desk up/down.


Favourite positions

The stars symbolise the favourite positions.

Setting a favourite position

1. Drive the desk to preferred position.
2. Press/click one of the circles with a star inside.
A pop-up notification asks if the position should be saved as a favourite position, press/click "Yes, please" to save the position. The circle now shows the height of the favourite position.
3. Drive the desk to a favourite position by pressing/clicking and holding the button.


The DPG will reflect the favourite positions saved through the app, so you can change desk height via the desk panel instead of using the app.

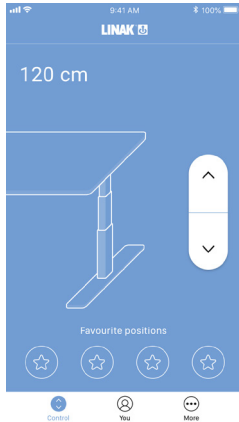


Press/click star to save



Confirm choice

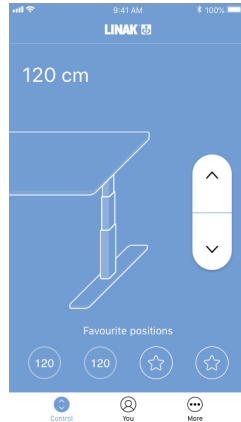


Two saved positions

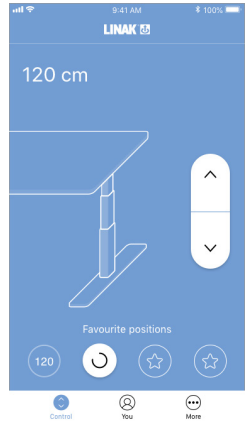

Driving to a favourite position


More

Press/click "More" to get access to a list of setting options and information arranged in five groups (the graphics below show a split view).

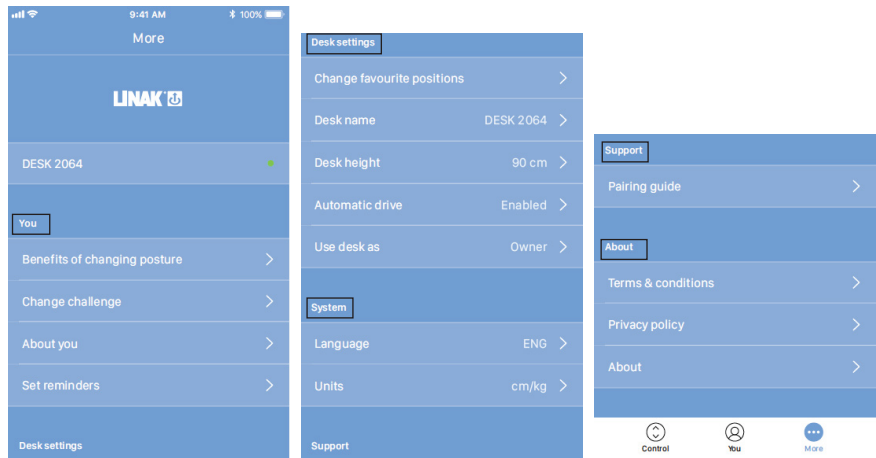

You

In the "You" section you can learn more about the benefits of changing position during the workday, or you can pick a new challenge. You also have the possibility of changing your personal information or your reminder settings.

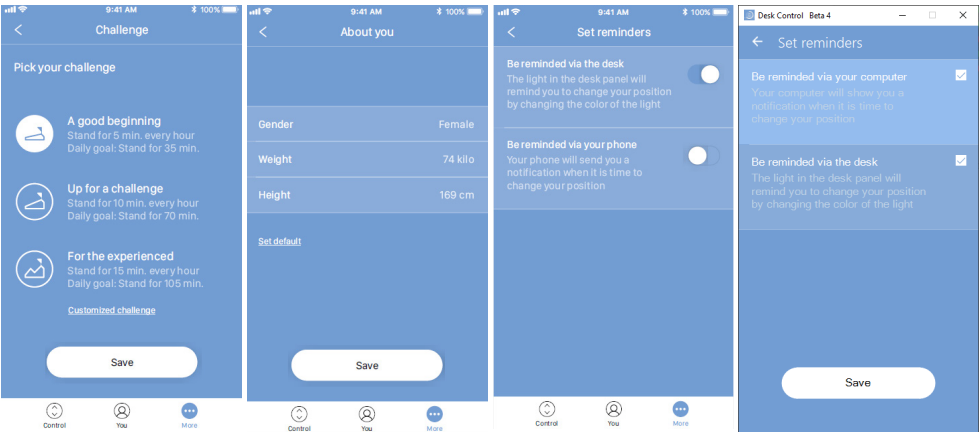


iOS/Android

Windows

Change challenge

Here you can select between the three standard challenges, or you can define a personal challenge. Press/click “Customized challenge” and set your goals for standing/sitting by pressing/clicking the up/down arrows. When finished, press/click “Done” and then “Save”.

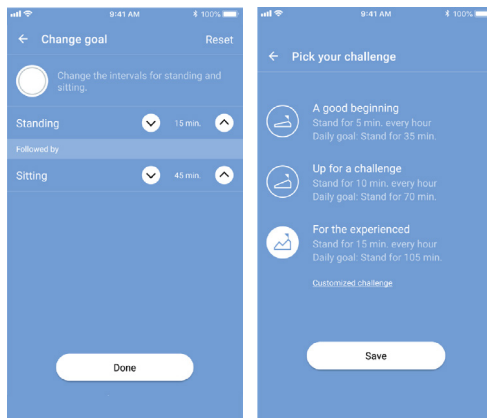

About you

Here you can set/change your gender, weight and height. The default settings are Male, 83 kg, and 181 cm.

Set reminders

Enable or disable reminders as pop-up notifications.

If it is supported by the connected product, e.g. the DPG1B, you can enable or disable the light strip as a reminder function.

See also [“Reminder notifications”](#).


Desk settings

In the “Desk settings” section you can change your favourite positions, change the desk name, connect to another desk, set the actual desk height, enable/disable “Automatic drive”, and switch between “Owner” and “Guest”.

Connecting to another desk

Steps 1 and 2 are only to be performed if the app is already connected to a desk.

- 1. Press/click on the connected desk to disconnect.
- 2. Confirm that you want to disconnect.
- 3. Press/click on a new desk to connect.
- 4. Choose between “Owner” and “Guest”.
- 5. Wait until the app is connected to the desk.

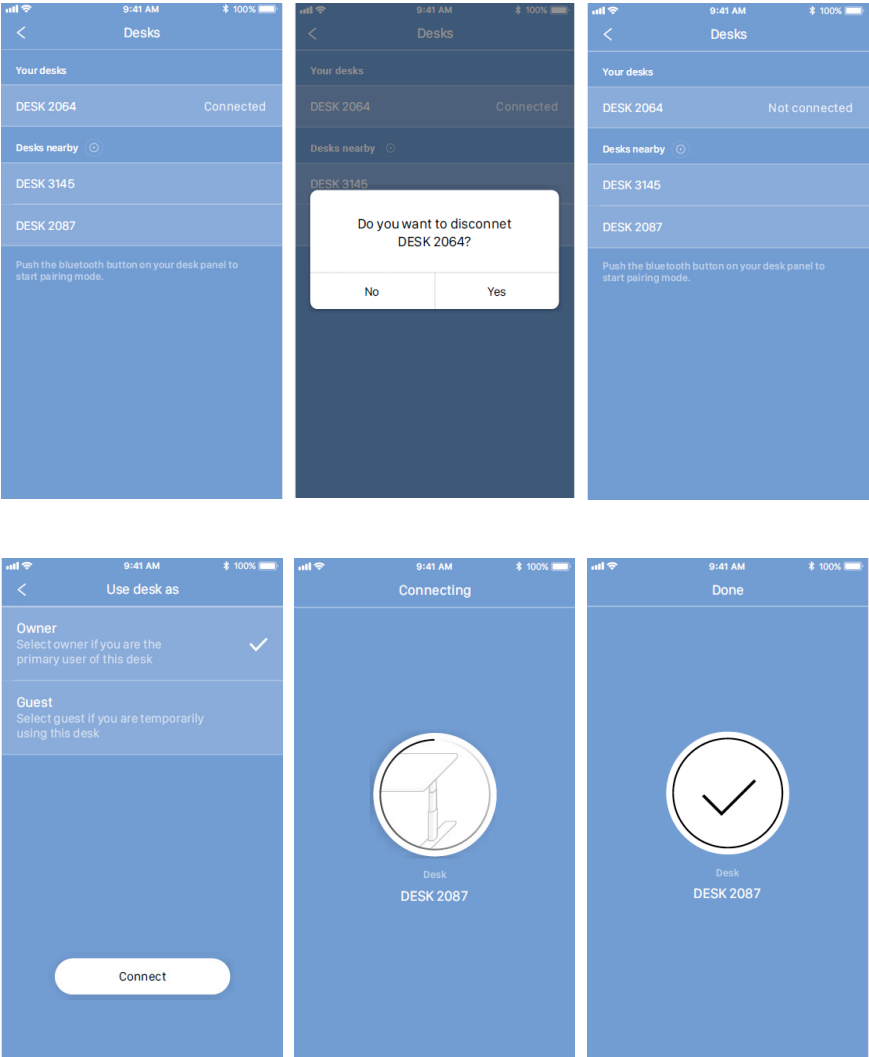

Set desk name

Change the name of the connected product to personalise the user experience of the app. Changing the desk name in the app will affect the Bluetooth® ID so the new name will be shown on the smart device and in the DPG1C display.

Set desk height

Set the actual height of the desk. An illustration guides you on how to measure. Choose height units (cm or inches).

Automatic drive

If "Automatic drive" is enabled, you can make the desk adjust non-stop to any favourite position by just pressing/clicking the relevant button once. This function is called "one-click-drive". It is only possible to enable "Automatic drive" if the app is connected to the "full" versions of the DPG1M/B/C and BLE2LIN, not the "limited" versions. An animation shows you how this feature works.

If you use the app to adjust the desk height, the desk will not stop at any intermediate favourite positions as it does if you use the DPG for desk height adjustment.

You have to accept the terms, i.e. accept the responsibility of any danger that can occur under these circumstances, in the pop-up notification before this feature can be enabled.

If you press/click any button, close the app or tilt the DPG during this automatic drive, you will interrupt the drive of the desk.

System

In the "System" section you can switch language. The language is default set to the language of the operating system of your smart device/computer. Choose between eight different languages in the app. The available languages are: English, Korean, Japanese, Chinese, French, Italian, German, and Spanish.

This change does not affect the language in the display of a DPG1C.

You also have the possibility of changing the units. Switch between "cm" and "inch" for height and "kg" and "lbs" for weight.

Support

In the "Support" section you can find a pairing guide which helps you pair the app to a desk.

About

The "About" section contains the terms and conditions for using the Desk Control™ app as well as the LINAK privacy policy.

According to the privacy policy, LINAK respects your privacy and does not access or use any data entered in the app (such as favourite positions, gender, height and weight) or collected by the app (statistics). The information is stored only on your device and can therefore only be accessed in your device.

About

Use your desk

[Link](#) to the "Made to Move" site where you can get guidance on how to use a sit/stand desk correctly.

Product information


[Link](#) to the LINAK website with information about this app.

Support

[Link](#) to the LINAK website with troubleshooting videos on the DPG products.

Reminder notifications

When reminder notifications are enabled, notifications will pop up to remind you when you need to change position. The reminders will appear based on your settings. On your smart device they will show on a locked or unlocked screen; on your computer they will show in the lower right corner of your monitor. On your computer the reminders are not saved in the notifications overview. The notifications depend on two types of data. They pop up as a result of either time-based data or data-based data.

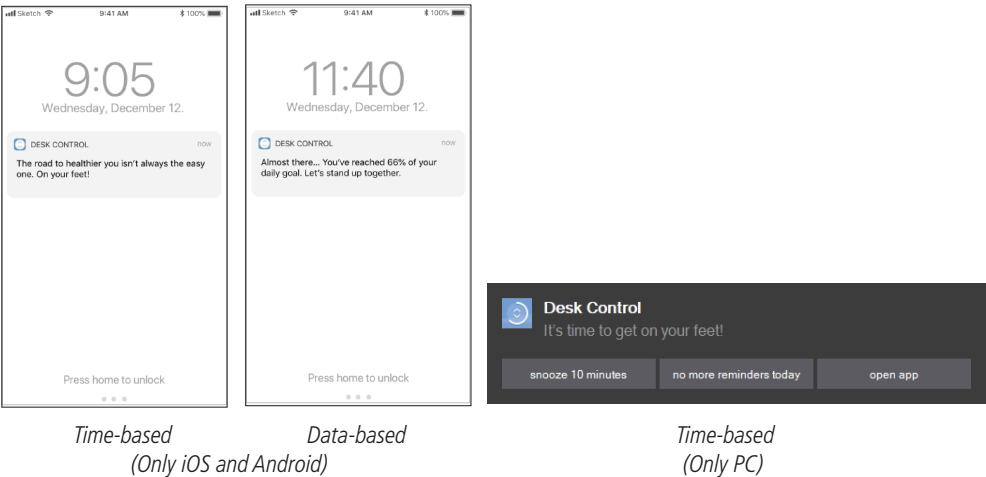

The time-based notifications are available for all and pop up based on the time the desk has been in sitting position. Press/click on the notification to open the app, or slide to the left on your smart device to see the three options:

- Snooze for 10 minutes (press/click to be reminded again in ten minutes)
- No more reminders today (press/click and neither your smart device/computer nor the DPG will show any reminders for the rest of the day)
- Open app (press/click to adjust the desk height - or use the DPG)

The data-based notifications are personalised and pop up based on your set challenge.

Achievement	Notification
0 %	Let’s get started. On your feet and move it a bit.
1 to 66 %	Get moving! You’ve reached X% of your daily goal.
67 to 99 %	Almost there. You’ve reached X% of your daily goal.
100 to 115 %	Congratulation! You’ve reached your daily goal.
>115 %	You are doing great! Maybe it’s time for a new challenge?

The notifications are based on your challenge set under 'You'. If the challenge is set to 10 minutes standing and 50 minutes sitting, the notification will be sent after your desk has been in sitting position for 50 minutes. If you have saved two favourite positions, these will count as sitting and standing heights. If you have saved no favourite positions, the trigger point is the desk minimum height plus 30 cm (adds up to approximately 95 cm). When the desk is moved above the trigger point, the DPG and the app see the desk in standing position until it is moved down again. When the desk reaching sitting position (below the trigger point), the notification is being reset and a new notification will appear after 50 min.



Notifications ONLY appear, when you are sitting – not when you are standing.

Timer reset

The notification timer will automatically be reset when:

- the desk is driven from standing to sitting position
- the app connects to the desk in the morning
- you reconnect to the desk after having been away from the desk for more than one hour
- you start a new challenge
- you adjust a challenge
- you have been connected as "Guest" (the reset will take place at midnight)

Statistics

The Desk Control™ App collects data in the background while connected to your desk. Each time you enter the app, the data is updated within 30 seconds.

As long as the app is connected to your desk, it registers the desk height even though you are not at your desk. This means that the statistical data is not always exact.

Recommendations on how to use Desk Control™

Overriding a learned sedentary behaviour is a true behavioural challenge. We have put together a guide to learn how to break up with your chair during your workday.

If you are not used to standing up and work, start with short intervals focusing on learning and getting into a habit. When this behaviour is starting to become a habit, continue to stand for longer periods e.g. using the guide below or simply testing what feels comfortable for you.

How to vary between standing and sitting while you work

The most important thing is to vary your position and to move around, preferably three times an hour. Instead of sitting for too long at a time, you can switch between standing and sitting positions. Remember good posture and to stand with your body weight evenly distributed on both legs.

- Start by raising your desk and stand for 5 minutes each hour before you go to lunch.
- Raise your desk just before your lunch break. Then your desk will be in the right position when you get back from lunch.
- Just after lunch, stand for 5 minutes before lowering your desk to sit for 55 minutes.
- Raise your desk again every hour so that you stand up working for 5 minutes each hour for the rest of the day.
- Raise your desk before you leave for the day – then it is ready for the next day.

Important reservations when varying between standing and sitting position:



If you are pregnant, have varicose veins or have a health condition that may prevent you from standing for 5 to 15 minutes at a time every hour, you should contact your doctor to make sure that this will not be detrimental to your health.



If you are not used to standing, start with a few minutes at a time and extend this standing period as you get used to work standing up.

Disposal of LINAK products

As our customers often ask us how our products can be disposed of or scrapped we have prepared this guidance that enables a classification to different waste fractions for recycling or combustion.

Guidance

We recommend that our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible material and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Handset/Control:	Plastic housing Cable PCB board	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now, almost all our casted plastic parts are supplied with an interior code for plastic type and fibre contents, if any.

Main groups of disposal

Product main groups	Metal scrap	Cable scrap	Electronics scrap	Plastic recycling or combustion	Comments
Bluetooth® Adapter			X	X	
DPG		X	X	X	

Disposal of batteries

Details regarding safe disposal of used and leaking batteries:

Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the environment.

How to deal with leaking batteries

Leaking batteries should be disposed as described above.

If leaking batteries are discovered in the product, the batteries must be removed at once to minimise damage to the product.





If leaking batteries are left in the product, it becomes defective.

It is recommended to use plastic gloves when handling leaking batteries. The contents of leaking batteries can cause chemical burns and respiratory irritation.


If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention.


DRAWING APPENDIX


DPG1K with cover

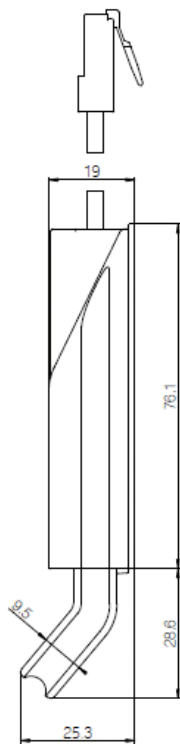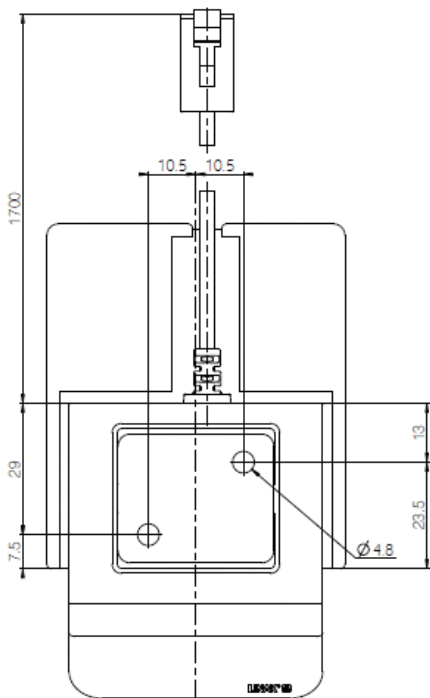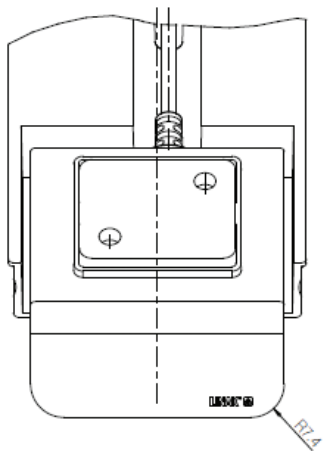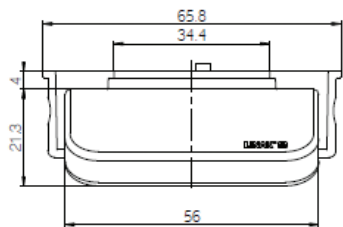


DPG1M with cover

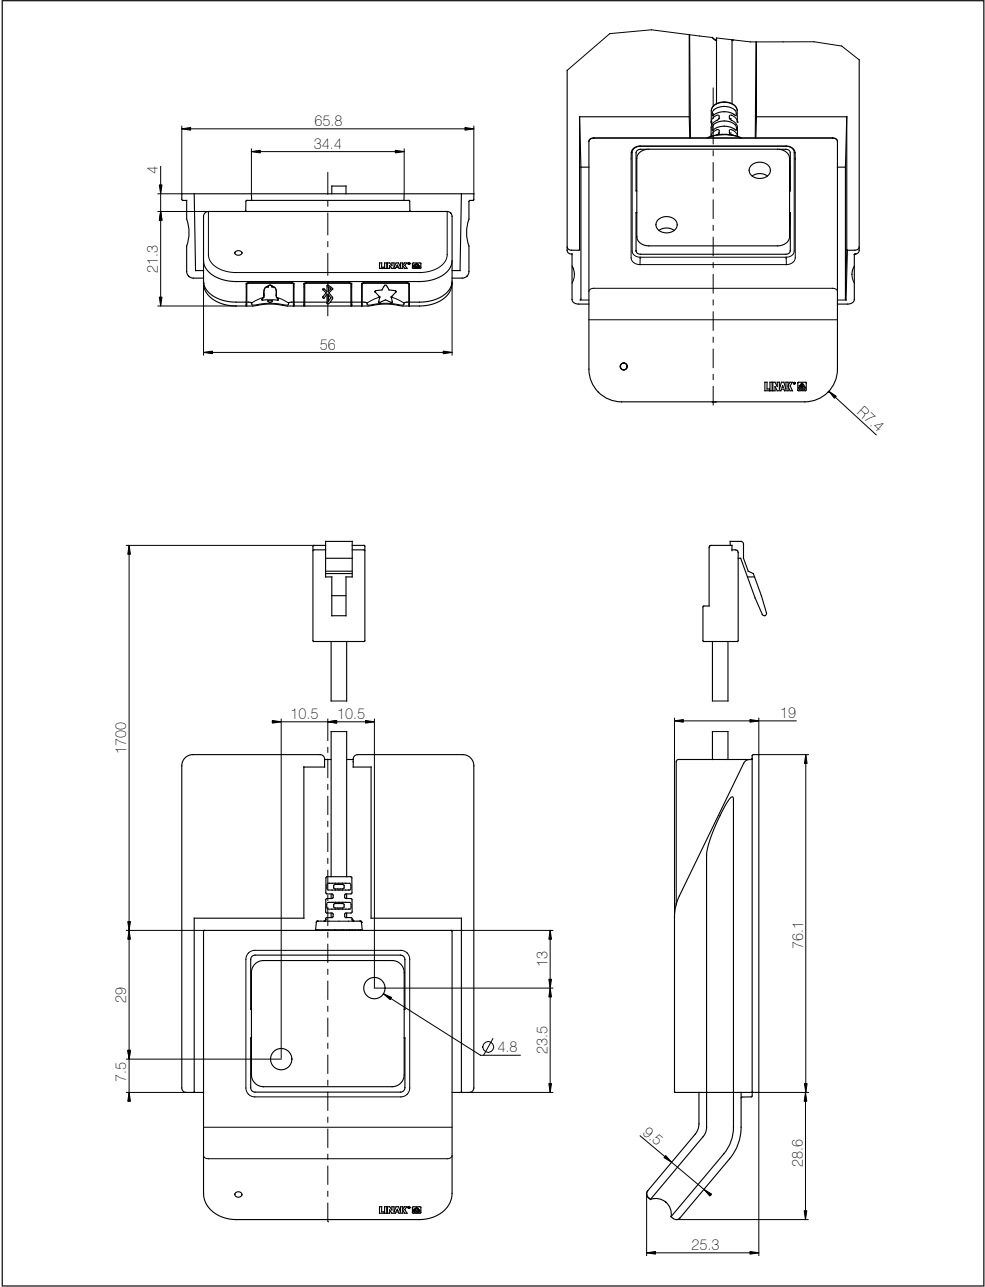

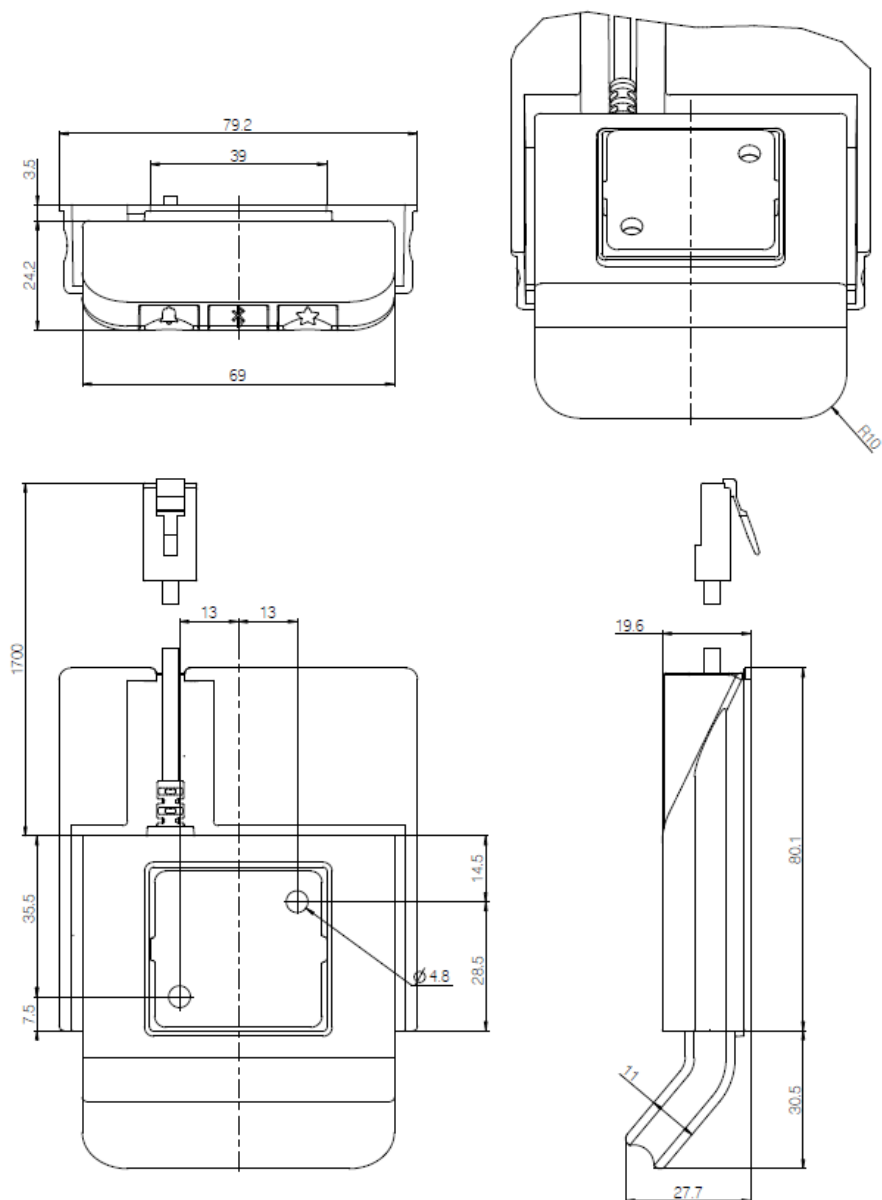

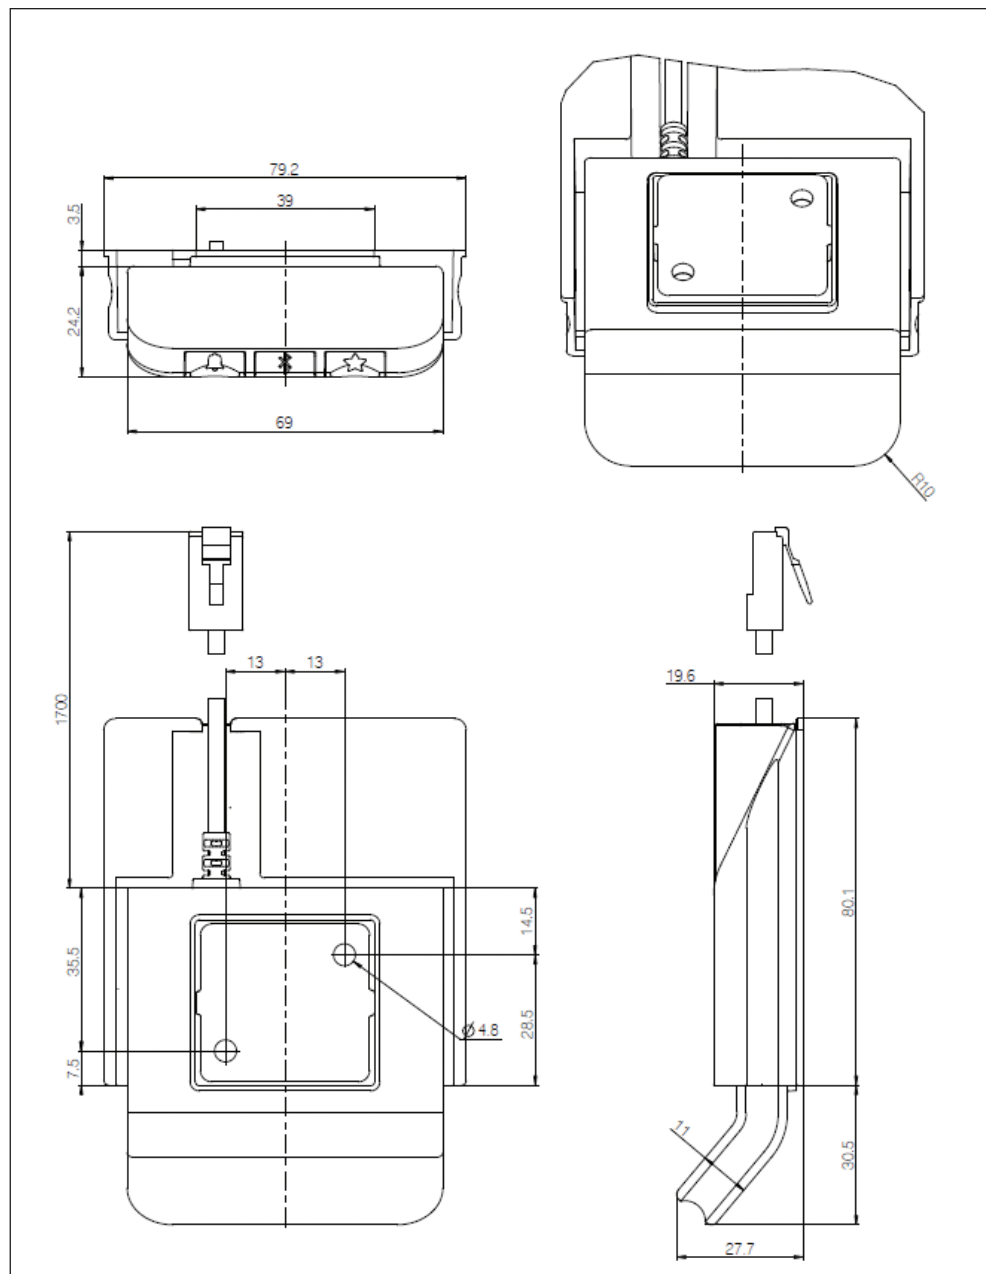

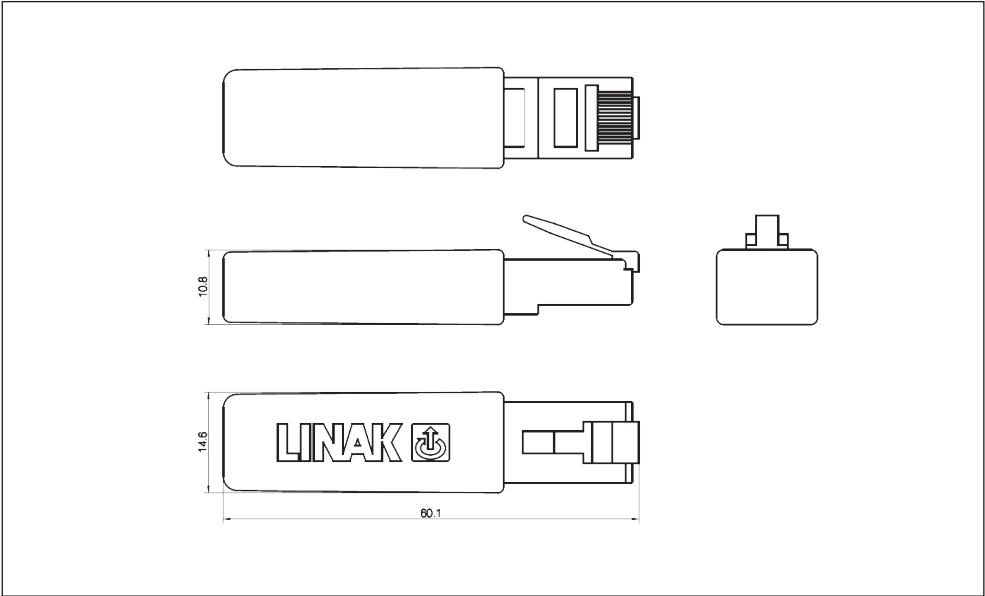

Labels

DPG1K



DPG1M



DPG1B



DPG1C



DPG QR codes:

Introduction to the DPG



Installation of the DPG



Bluetooth® Adapter



LINAK APPLICATION POLICY

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or new customer application.

LINAK products as defined above are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that the LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

Made for



iPod



iPhone



iPad

iPod touch, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod touch", "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod touch, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod touch, iPhone or iPad may affect wireless performance.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LINAK A/S is under license. Other trademarks and trade names are those of their respective owners.

FACTORIES

• Denmark

LINAK A/S
Group Headquarters
Tel: +45 73 15 15 15
Fax: +45 74 45 80 48
Fax (Sales): +45 73 15 16 13
www.linak.com

• Denmark

LINAK Profiles
Tel: +45 73 70 95 30
www.linak-profiles.com

• China

LINAK (Shenzhen) Actuator Systems, Ltd.
Tel: +86 755 8610 6656
Fax: +86 755 8610 6990
www.linak.cn

• Slovakia

LINAK Slovakia s.r.o.
Tel: +421 51 7563 444
Fax: +421 51 7563 410
www.linak.sk

• Thailand

LINAK APAC Ltd.
Tel: +66 33 265 400
www.linak.com

• USA

LINAK U.S. Inc.
Americas Headquarters
Tel: +1 502 253 5595
Fax: +1 502 253 5596
www.linak-us.com

SUBSIDIARIES

• Australia

LINAK Australia Pty. Ltd
Tel: +61 3 8796 9777
Fax: +61 3 8796 9778
www.linak.com.au

• Austria

LINAK Repräsentanz
Österreich (Wien)
Tel: +43 (1) 890 7446
Fax: +43 (1) 890 744615
www.linak.at - www.linak.hu

• Belgium

LINAK Benelux
(Belgium & Luxembourg)
Tel: +32 (0)9 230 01 09
www.linak.be - www.fr.linak.be

• Brazil

LINAK Do Brasil Comércio De Atuadores Ltda.
Tel: +55 (11) 2832 7070
Fax: +55 (11) 2832 7060
www.linak.com.br

• Canada

LINAK Canada Inc.
Tel: +1 502 253 5595
Fax: +1 416 255 7720
www.linak-us.com

• China

LINAK (Shenzhen) Actuator Systems, Ltd.
Tel: +86 755 8610 6656
Fax: +86 755 8610 6990
www.linak.cn

• Czech Republic

LINAK C&S s.r.o.
Tel: +42 058 174 1814
Fax: +42 058 170 2452
www.linak.cz - www.linak.sk

• Denmark - Headquarters

LINAK A/S - Group Headquarters
Tel: +45 73 15 15 15
Fax: +45 74 45 80 48
Fax (Sales): +45 73 15 16 13
www.linak.com

• Denmark - International

LINAK International
Tel: +45 73 15 15 15
www.linak.com

• Denmark - Sales

LINAK DANMARK A/S
Tel: +45 86 80 36 11
Fax: +45 86 82 90 51
www.linak.dk

• Finland

LINAK OY
Tel: +358 10 841 8700
www.linak.fi

• France

LINAK FRANCE E.U.R.L
Tel: +33 (0) 2 41 36 34 34
Fax: +33 (0) 2 41 36 35 00
www.linak.fr

• Germany

LINAK GmbH
Tel: +49 6043 9655 0
Fax: +49 6043 9655 60
www.linak.de

• India

LINAK A/S India Liaison Office
Tel: +91 120 4531797
Fax: +91 120 4786428
www.linak.in

• Ireland

LINAK UK Limited (Ireland)
Tel: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
+44 (0)796 855 1606 (UK Mobile)
+35 387 634 6554 (Republic of Ireland Mobile)
www.linak.co.uk

• Italy

LINAK ITALIA S.r.l
Tel: +39 02 48 46 33 66
Fax: +39 02 48 46 82 52
www.linak.it

• Japan

LINAK K.K.
Tel: 81-45-533-0802
Fax: 81-45-533-0803
www.linak.jp

• Malaysia

LINAK Actuators Sdn. Bhd.
Tel: +60 4 210 6500
Fax: +60 4 226 8901
www.linak.my

• Netherlands

LINAK Benelux
Tel: +31 76 5 42 44 40
www.linak.nl

• New Zealand

LINAK New Zealand Ltd
Tel: +64 9580 2071
Fax: +64 9580 2072
www.linak.com.au

• Norway

LINAK Norge AS
Tel: +47 32 82 90 90
www.linak.no

• Poland

LINAK Polska
LINAK Danmark A/S (Spółka Akcyjna)
Tel: +48 22 295 09 70/22 295 09 71
www.linak.pl

• Republic of Korea

LINAK Korea Ltd.
Tel: +82 2 6231 1515
Fax: +82 2 6231 1516
www.linak.kr

• Slovakia

LINAK Slovakia s.r.o.
Tel: +421 51 7563 444
www.linak.sk

• Spain

LINAK Actuadores, S.L.U
Tel: +34 93 588 27 77
Fax: +34 93 588 27 85
www.linak.es

• Sweden

LINAK Scandinavia AB
Tel: +46 8 732 20 00
Fax: +46 8 732 20 50
www.linak.se

• Switzerland

LINAK AG
Tel: +41 43 388 31 88
Fax: +41 43 388 31 87
www.linak.ch - www.fr.linak.ch
www.it.linak.ch

• Taiwan

LINAK (Shenzhen) Actuator systems Ltd.
Taiwan Representative office
Tel: +886 2 27290068
Fax: +886 2 27290096
www.linak.tw

• Thailand

LINAK APAC Ltd.
Tel: +66 33 265 400

• Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.
Tel: +90 312 4726338
Fax: +90 312 4726635
www.linak.com.tr

• United Kingdom

LINAK UK Limited
Tel: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
www.linak.co.uk

• USA

LINAK U.S. Inc.
North and South America Headquarters
Tel: +1 502 253 5595
Fax: +1 502 253 5596
www.linak-us.com
www.linak-latinamerica.com

DISTRIBUTORS

• Argentina

NOVOTEC ARGENTINA SRL
Tel: 011-4303-8989/8900
Fax: 011-4032-0184
www.novotecargentina.com

• Colombia

MEM Ltda
Tel: +57 (1) 334-7666
Fax: +57 (1) 282-1684
www.mem.net.co

• India

Mechatronics Control Equipments India Pvt Ltd
Tel: +91-44-28558484, 85
www.mechatroniconcontrol.com

• Indonesia

PT. HIMALAYA EVEREST JAYA
Tel: +6 221 544 8956/221 549 8965
Fax: +6 221 619 1925
Fax (Sales): +6 221 619 4658
www.hej.co.id

• Iraq

Scan Medical Tech
Tel: +964 770 470 2202

• Israel

NetivTech LTD
Tel: +972 55-2266-535
Fax: +972 2-9900-560
www.netivtech.com

• Kingdom of Bahrain

Mechatronics Industrial Equipments
Tel: +973 17280059
Fax: +973 17910045
www.mechatroniconbsh.com

• Qatar

Mechatronics Industrial Equipments
Tel: +974 44581155
Fax: +974 44689135
www.mechatroniconqatar.com

• Singapore

Servo Dynamics Pte Ltd
Tel: +65 6844 0288
Fax (Sales): +65 6844 0070

• South Africa

Industrial Specialised Applications CC
Tel: +27 011 466 0346
www.isaza.co.za

• United Arab Emirates

Mechatronics Industrial Equipments LLC
Tel: +971 4 267 4311
Fax: +971 4 267 4312
www.mechatroniconae

LINAK® accepts no responsibility for possible errors or inaccuracies in catalogues, brochures, and other material. LINAK reserves the right to change its product availability and reserves the right to discontinue the sale of any product.

The user is responsible for determining the suitability of LINAK products for a specific application. All sales are subject to the 'Standard Terms of Sale and Delivery', available on LINAK websites.

LINAK and the LINAK logotype are registered trademarks of LINAK A/S. All rights reserved.



WE IMPROVE YOUR LIFE